

**SBC8253**

**Pentium All-in-One  
Half-size SBC Series  
with VGA Interface**

**User's Manual**

## **Disclaimers**

The information in this manual has been carefully checked and is believed to be accurate. AXIOM Technology Co., Ltd. assumes no responsibility for any infringements of patents or other rights of third parties which may result from its use.

AXIOM Technology assumes no responsibility for any inaccuracies that may be contained in this document. AXIOM Technology makes no commitment to update or to keep current the information contained in this manual.

AXIOM Technology reserves the right to make improvements to this document and/or product at any time and without notice.

No part of this document may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of AXIOM Technology Co., Ltd.

**©Copyright 2000 by AXIOM Technology Co., Ltd.**  
**All rights reserved.**  
**October 2000, Version A5**  
**Printed in Taiwan**

## **ESD Precautions**

Integrated circuits on computer boards are sensitive to static electricity. To avoid damaging chips from electrostatic discharge, observe the following precautions:

- Do not remove boards or integrated circuits from their anti-static packaging until you are ready to install them.
- Before handling a board or integrated circuit, touch an unpainted portion of the system unit chassis for a few seconds. This helps to discharge any static electricity on your body.
- Wear a wrist-grounding strap, available from most electronic component stores, when handling boards and components.

### **Trademarks Acknowledgments**

AXIOM is a trademark of AXIOM Technology Co., Ltd.

MS-DOS, and Windows '95 are trademarks of Microsoft Corporation.

AMD is a trademark of Advanced Micro Devices, Inc.

AWARD is a trademark of Award Software, Inc.

Cyrix is a trademark of Cyrix Corporation.

Intel and Pentium are trademarks of Intel Corporation.

Winbond is a trademark of Standard Microsystems Corporation.

C&T is a trademark of Chips and Technologies, Inc.

SST is a trademark of Silicon Storage Technology, Inc.

Realtek is a registered trademark of Realtek Semiconductor Corporation.

Other brand names and trademarks are the properties and registered brands of their respective owners.

# Table of Contents

<b>CHAPTER 1 INTRODUCTION</b>	
1.1 SPECIFICATIONS.....	2
1.2 UTILITIES SUPPORTED .....	4
<b>CHAPTER 2 JUMPERS AND CONNECTORS</b>	
2.1 BOARD LAYOUT AND FIXING HOLES.....	5
2.2 PLACEMENT .....	6
2.3 JUMPER SETTINGS.....	7
2.3.1 CPU Settings: JP7, JP11, JP12.....	8
2.3.1.1 CPU Jumper Settings Reference.....	9
2.3.2 DiskOnChip® Memory Segment: JP8 .....	11
2.3.3 COM2 RS-232/422/485 Setting: JP2, JP3, JP4..	11
2.3.4 Watchdog Trigger Mode Setting: JP5.....	11
2.3.5 CMOS Clear Jumper: JP6.....	11
2.3.6 AT/ATX Power Selection: JP9, JP10 .....	12
2.3.7 LCD Voltage Selection: JP1.....	12
2.4 CONNECTORS.....	12
<b>CHAPTER 3 HARDWARE DESCRIPTION</b>	
3.1 MICROPROCESSORS.....	13
3.2 BIOS .....	13
3.3 SYSTEM MEMORY.....	13
3.4 I/O PORT ADDRESS MAP .....	14
3.5 INTERRUPT CONTROLLER .....	15
3.6 IDE INTERFACE CONNECTOR.....	16
3.7 DISPLAY INTERFACE .....	17
3.7.1 Flat Panel/CRT Interface Controller.....	17
3.7.2 Features .....	17
3.7.3 VGA/Flat Panel Connectors.....	17
3.7.4 Flat Panel Connector Pin Description .....	19
3.8 FLOPPY DISK CONTROLLER.....	19
3.9 PARALLEL PORT INTERFACE .....	20
3.10 SERIAL PORT INTERFACE .....	20
3.10.1 Serial Ports IRQ Selection .....	20


3.11 REAL TIME CLOCK AND CMOS RAM .....	21
3.12 KEYBOARD AND PS/2 MOUSE CONNECTOR .....	22
3.13 USB CONNECTOR .....	22
3.14 ETHERNET CONNECTORS.....	22
3.15 CPU AND SYSTEM FAN CONNECTOR .....	23
3.16 PC/104 CONNECTORS .....	23
3.17 PIN ASSIGNMENTS OF OTHER CONNECTORS...	24
<b>CHAPTER 4 ETHERNET</b>	
4.1 INTRODUCTION.....	27
4.2 FEATURES.....	27
4.3 DRIVERS SUPPORTED .....	27
<b>CHAPTER 5 DISPLAY DRIVERS</b>	
5.1 WINDOWS 3.1x .....	30
5.1.1 Driver Installation - DOS Setup .....	30
5.1.2 Changing Display Drivers from DOS.....	31
5.1.3 Changing Display Drivers from Windows.....	31
5.1.4 Changing Color Schemes.....	31
5.2 WINDOWS NT 3.5x .....	32
5.2.1 Driver Installation .....	32
5.3 OS/2.....	33
5.3.1 Driver Installation .....	33
5.3.2 WIN-OS/2 .....	34
5.3.3 Driver Diskette Copy.....	35
<b>CHAPTER 6 AWARD BIOS UTILITY</b>	
6.1 ENTERING SETUP .....	37
6.2 CONTROL KEYS .....	38
6.3 GETTING HELP.....	38
6.4 THE MAIN MENU .....	39
6.5 STANDARD CMOS SETUP MENU.....	41
6.6 BIOS FEATURES SETUP MENU .....	45
6.6.1 Onboard VGA Functions .....	50
6.7 CHIPSET FEATURES SETUP MENU.....	51
6.8 POWER MANAGEMENT SETUP.....	54
6.9 PNP/PCI CONFIGURATION SETUP.....	59

<b>6.10</b>	<b>LOAD BIOS DEFAULTS .....</b>	<b>61</b>
<b>6.11</b>	<b>LOAD SETUP DEFAULTS.....</b>	<b>62</b>
<b>6.12</b>	<b>INTEGRATED PERIPHERALS .....</b>	<b>63</b>
<b>6.13</b>	<b>SUPERVISOR/USER PASSWORD SETTING .....</b>	<b>66</b>
<b>6.14</b>	<b>IDE HDD AUTO DETECTION .....</b>	<b>68</b>
<b>6.15</b>	<b>HARD DISK LOW LEVEL FORMAT UTILITY.....</b>	<b>71</b>
<b>6.16</b>	<b>SAVE &amp; EXIT SETUP.....</b>	<b>73</b>
<b>6.17</b>	<b>EXIT WITHOUT SAVING .....</b>	<b>74</b>
<b>6.18</b>	<b>POWER-ON BOOT.....</b>	<b>74</b>
<b>APPENDIX A      WATCHDOG TIMER</b>		
	<b>USING THE WATCHDOG FUNCTION .....</b>	<b>75</b>

**This page does not contain any information.**

## Chapter 1

### Introduction

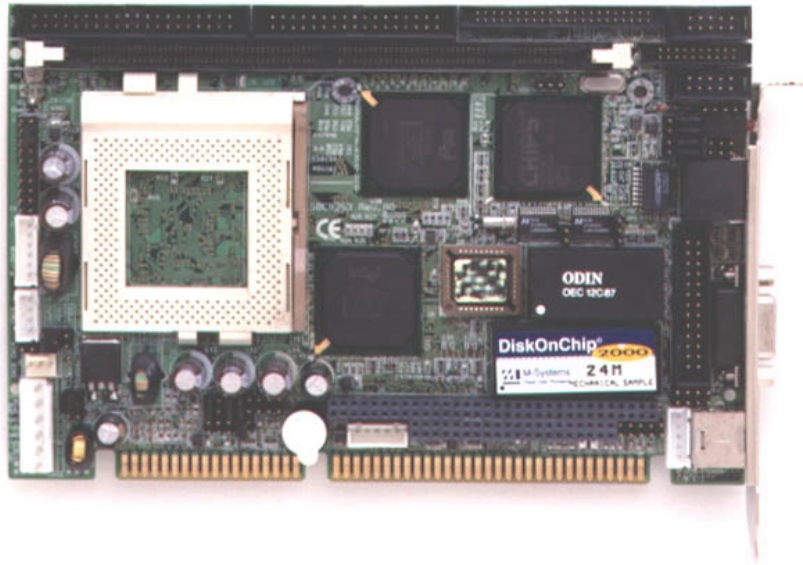

The **SBC8253VE** is a Pentium-based half-size SBC with video and Ethernet functions. Designed with the space-limited applications in mind, the **SBC8253** is practically the finest half-size 586 SBC in existence. Using a standardized format conforming to the size of a half-size ISA card, **SBC8253** can adapt a wide variety of Pentium 586 microprocessors by simply configuring its onboard jumpers. To simplify system integration, it packs half-size provisions such as super I/Os, X VGA, LCD, Ethernet, solid state disk, all on a single board plus unique half-size features such as 2 serial ports (1 x RS-232, 1 x RS-232/422/485).

The industrial-grade construction of **SBC8253** allows your system to endure the continuous operation in hostile environments where stability and reliability are basic requirements. Its built-in watchdog timer, a special industrial feature not commonly seen on other motherboards, enhances system dependability of **SBC8253**.

Designed for the professional half-size developers, the Pentium half-size **SBC8253** is virtually the ultimate one-step solution for half-size system applications.

## **1.1 Specifications**

- **CPU:** P54C/P55C 90/100/120/133/166/200/233 MHz,  
Intel Low Power 166/266 MHz,  
AMD K6 166/200/233/266/300 MHz,  
AMD K6-2 266/300/366/400 MHz,  
AMD Low Power K6-2E 233/266/300/333 MHz  
Cyrix/IBM 6x86/L/MX P150+/P166+/PR200/  
PR233/PR266; MII PR300,  
Idt C6 180/200/240 MHz,  
Winchip 2-3D 200/240/266 MHz
- **System Chipset:** Intel 430TX core logic controller
- **Cache Size:** 512KB L2 cache RAM
- **System Memory:** 1 x 168-pin DIMM socket upgradeable  
to 128MB using unbuffered SDRAM
- **BIOS:**
  - Award BIOS, Y2K compliant
  - 2Mbit Flash ROM, DMI, Plug and Play
  - SmartView VGA BIOS function
  - Integrated Ethernet Boot ROM function
- **Onboard IDE:**
  - PIO Mode 0-4, DMA Mode 0-2 and Ultra DMA/33 One  
Channel up to 2 devices
  - LS-120 & ZIP bootable

- **Onboard Multi I/O:**
  - One floppy port supporting up to 2 devices (LS-120 & ZIP Bootable)
  - One SPP/EPP/ECP parallel port; supports LS-120
  - Two 16550 UART-compatible serial ports with COM1 as RS-232 and COM2 jumper selectable as RS-232/422/485
  - One IrDA for wireless communication
- **USB Interface:** Two ports with Fuse Protection and complies with USB Spec. Rev. 1.0
- **PS/2 KB/Mouse:** Mini DIN connector
- **Watchdog Timer:**
  - System reset or Non-Maskable Interrupt Software Programmable Time Interval and jumper selectable
  - 64 levels, 0.5-8/5-80/50-800/100/1600 seconds
- **Power Management:** ACPI (Advanced Configuration and Power Interface)
- **ISA High Drive:** Maximum up to 64mA
- **Onboard Display:**
  - C&T 69000 supporting CRT/LCD displays with integrated 2MB SDRAM
  - External CRT D-type connector
- **Onboard Ethernet:**
  - Realtek 8139B/C PCI Bus 10/100 Base-T Ethernet with Boot ROM function
  - Wake On LAN (via ATX power supply)
  - Equipped with RJ-45 connector
- **DiskOnChip®:** One bank for M-Systems DiskOnChip®
- **Form Factor:** Half-size CPU card with ISA interface
- **Other Features:**
  - Internal power connectors
  - Win 95/98/2000 Software-off


**NOTE:** *Specifications are subject to change without notice.*

## **1.2 Utilities Supported**


- Ethernet Drivers
- Flat panel/CRT Utility and Drivers

## Chapter 2 Jumpers and Connectors

### 2.1 Board Layout and Fixing Holes

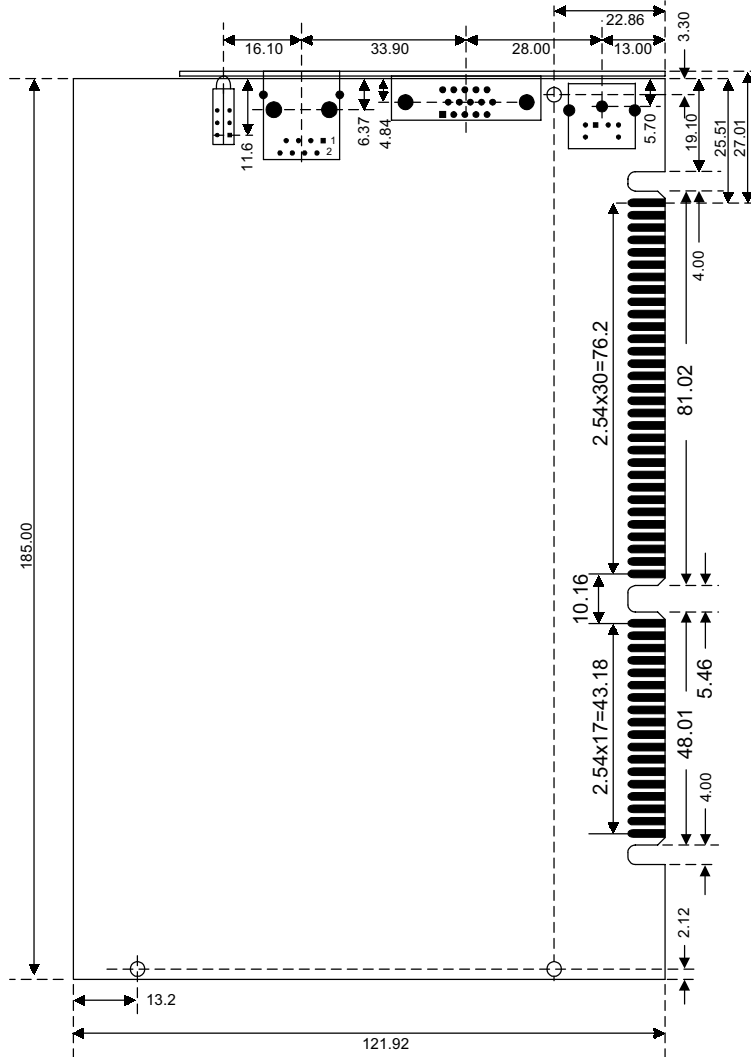

## 2.2 Placement

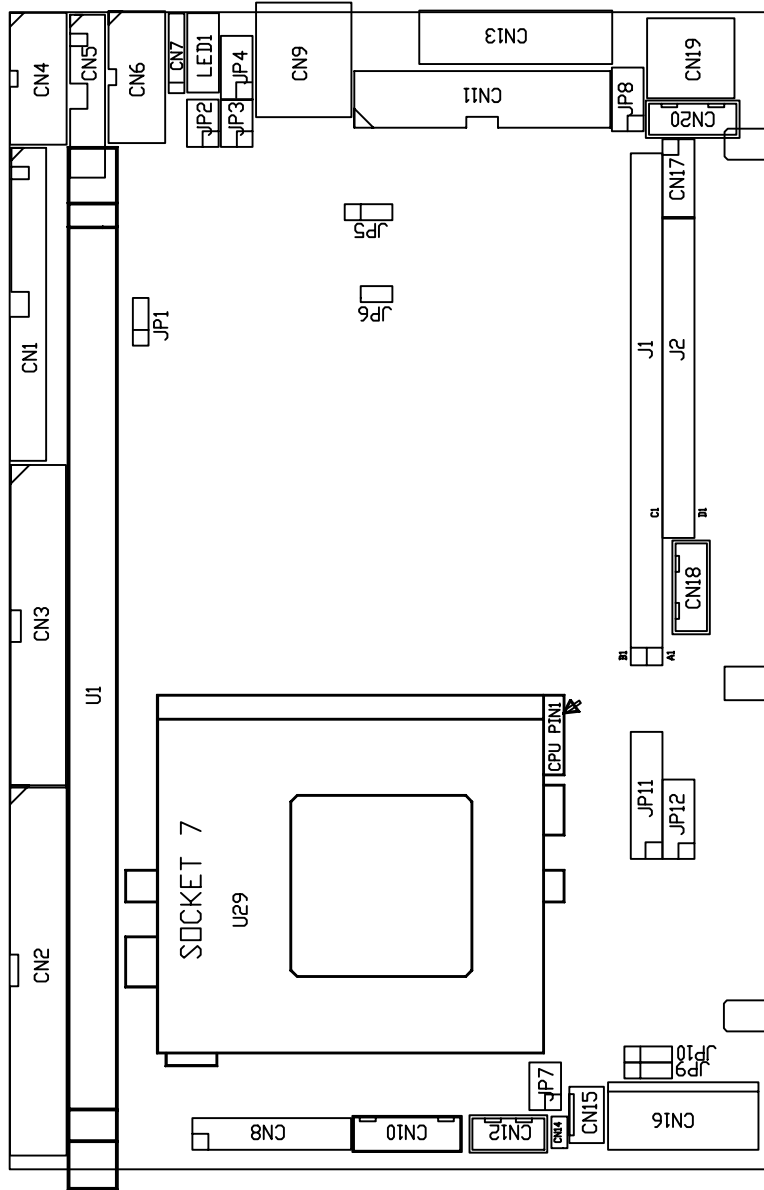

## 2.3 Jumper Settings

Making the proper jumper settings configures the **SBC8253** to match the needs of your application. The following tables show the correct jumper settings for the onboard devices.

Jumper	Function/Default	Setting
JP1	LCD Voltage Selection: 5V	Short 1-2
JP2	COM2 RS-232/422/485 Selection: RS-232	Short 3-5, 4-6
JP3		Short 3-5, 4-6
JP4		Short 1-2
JP5	Watchdog Function Setting: Disabled	Open
JP6	CMOS Clear Jumper: Normal	Open
JP7	CPU Type Selection: Dual Voltage	Short 3-4
JP8	DiskOnChip® Memory Segment Setting: D0000-D3FFF	Short 1-2
JP9, JP10	AT/ATX Power Supply Selection: AT power supply	Short 1-2
JP11	CPU Clock Ratio and Clock Frequency Selection:  x1.5/x3.5 3.3V 66MHz	Open Short 7-8 Open (pins 11-12, 13-14)
JP12	CPU Vcore Selection: 2.8V	Short 7-8

**IMPORTANT:** *The above default settings are set for Intel MMX-233 MHz CPU use. Please refer to the following tables when installing other types of microprocessors.*

### 2.3.1 CPU Settings: JP7, JP11, JP12

When installing a new CPU, the related jumpers including CPU voltage, CPU type, CPU Clock Ration and CPU Bus Clock may need to be adjusted.

<b>CPU Model</b>	<b>Clock</b>	<b>JP7</b>	<b>JP11</b>	<b>JP12</b>
<b>Intel P54C</b>				
P-90	60MHz	Short 5-6	Short 11-12, 13-14	Short 1-2, 3-4, 5-6, 7-8
P-100	66MHz	Short 5-6	Short 7-8	Short 1-2, 3-4, 5-6, 7-8
P-120	60MHz	Short 5-6	Short 1-2, 11-12, 13-14	Short 1-2, 3-4, 5-6, 7-8
P-133	66MHz	Short 5-6	Short 1-2, 7-8	Short 1-2, 3-4, 5-6, 7-8
P-166	66MHz	Short 5-6	Short 1-2, 3-4, 7-8	Short 1-2, 3-4, 5-6, 7-8
P-200	66MHz	Short 5-6	Short 3-4, 7-8	Short 1-2, 3-4, 5-6, 7-8
<b>Intel P55C MMX</b>				
P-166	66MHz	Short 3-4	Short 1-2, 3-4, 7-8	Short 7-8
P-200	66MHz	Short 3-4	Short 3-4, 7-8	Short 7-8
P-233	66MHz	Short 3-4	Short 7-8	Short 7-8
<b>Intel Low Power MMX</b>				
P-166	66MHz	Short 1-2	Short 1-2, 3-4, 5-6, 9-10, 15-16	Short 5-6, 7-8, 9-10
P-266	66MHz	Short 1-2	Short 1-2, 3-4, 9-10, 15-16	Short 5-6, 7-8, 9-10
<b>AMD K6</b>				
K6-166	66MHz	Short 3-4	Short 1-2, 3-4, 7-8	Short 1-2, 7-8
K6-200	66MHz	Short 3-4	Short 3-4, 7-8	Short 1-2, 7-8
K6-233	66MHz	Short 3-4	Short 7-8	Short 5-6, 7-8
K6-266	66MHz	Short 3-4	Short 1-2, 5-6, 7-8	Short 3-4
K6-300	66MHz	Short 3-4	Short 1-2, 3-4, 5-6, 7-8	Short 3-4
<b>AMD K6-2</b>				
K6-2-266	66MHz	Short 3-4	Short 1-2, 5-6, 7-8	Short 3-4
K6-2-300	66MHz	Short 3-4	Short 1-2, 3-4, 5-6, 7-8	Short 3-4
K6-2-366	66MHz	Short 3-4	Short 5-6, 7-8	Short 3-4
K6-2-400	66MHz	Short 3-4	Short 1-2, 7-8	Short 3-4

Continued . . . . .

CPU Model	Clock	JP7	JP11	JP12
<b>AMD K6-2E Low Power</b>				
K6-2E-233	66MHz	Short 3-4	Short 7-8	Short 5-6, 7-8, 9-10
K6-2E-266	66MHz	Short 3-4	Short 1-2, 5-6, 7-8	Short 5-6, 7-8, 9-10
K6-2E-300	66MHz	Short 3-4	Short 1-2, 3-4, 5-6, 7-8	Short 5-6, 7-8, 9-10
K6-2E-333	66MHz	Short 3-4	Short 3-4, 5-6, 7-8	Short 5-6, 7-8, 9-10
<b>Cyrix / IBM</b>				
6x86MX-PR166	66MHz	Short 3-4	Short 1-2, 7-8	Short 1-2, 7-8
6x86MX-PR200	66MHz	Short 3-4	Short 1-2, 3-4, 7-8	Short 1-2, 7-8
6x86MX-PR233	66MHz	Short 3-4	Short 5-6, 7-8	Short 1-2, 7-8
6x8PR6MX-266	66MHz	Short 3-4	Short 7-8	Short 1-2, 7-8
MII-300GP	66MHz	Short 3-4	Short 7-8	Short 1-2, 7-8
<b>IDT/Winchip</b>				
C6-180	60MHz	Short 5-6	Short 3-4, 11-12, 13-14	Short 1-2, 3-4, 5-6, 7-8
C6/W2-200	66MHz	Short 5-6	Short 3-4, 7-8	Short 1-2, 3-4, 5-6, 7-8
C6/W2-240	60MHz	Short 5-6	Short 1-2,5-6,11-12,13-14	Short 1-2, 3-4, 5-6, 7-8
C6/W2-266	66MHz	Short 5-6	Short 1-2, 5-6, 7-8	Short 1-2, 3-4, 5-6, 7-8

### 2.3.1.1 CPU Jumper Settings Reference

With the rapid development and short life cycle of microprocessors in the market, the preceding section only provides the jumper settings of currently available CPU types and makes. For upcoming CPU types, please refer to the following tables when configuring the jumpers onboard the SBC8253.

#### CPU Type Selection: JP7

Options	Settings
Single Voltage	Short 5-6
Dual Voltage	Short 3-4 (default)
Intel Low Power	Short 1-2

**CPU Vcore Power Selection: JP12**

Options	Settings	Options	Settings
1.8V	Short 3-4, 7-8, 9-10	2.7V	Short 1-2, 3-4, 5-6
1.9V	Short 5-6, 7-8, 9-10	2.8V	Short 7-8 (default)
2.0V	Short 3-4, 5-6, 7-8, 9-10	2.9V	Short 1-2, 7-8
2.1V	Short 1-2	3.0V	Short 3-4, 7-8
2.2V	Short 3-4	3.1V	Short 1-2, 3-4, 7-8
2.3V	Short 1-2, 3-4	3.2V	Short 5-6, 7-8
2.4V	Short 5-6	3.3V	Short 1-2, 5-6, 7-8
2.5V	Short 1-2, 5-6	3.4V	Short 3-4, 5-6, 7-8
2.6V	Short 3-4, 5-6	3.5V	Short 1-2, 3-4, 5-6, 7-8

**CPU Vio (VCC3) Select: JP11**

Options	Settings
3.3V	Short 7-8 (default)
2.5V (Low Power)	Short 9-10

**CPU Clock Ratio Selection: JP11**

Options	Settings	Options	Settings
x 1.5/3.5	Open (default)	x 4.5	Short 1-2, 3-4, 5-6
x 2/x 6	Short 1-2	x 5	Short 3-4, 5-6
x 2.5	Short 1-2, 3-4	x 5.5	Short 5-6
x 3	Short 3-4	<b>Intel Low Power</b>	
x 4	Short 1-2, 5-6	66/166	Short 1-2, 3-4, 5-6, 15-16
		66/266	Short 1-2, 3-4, 15-16

**CPU Bus Frequency Selection: JP11 (Pins 11-12, 13-14)**

Options	Settings	
	11-12	13-14
60MHz	Short	Short
66MHz (default)	Open	Open

### 2.3.2 DiskOnChip® Memory Segment: JP8

Options	Settings
D0000 – D3FFF	Short 1-2 (default)
D4000 – D7FFF	Short 3-4
D8000 – DBFFF	Short 5-6
DC000 – DFFFF	Short 7-8

### 2.3.3 COM2 RS-232/422/485 Setting: JP2, JP3, JP4

COM4	JP2	JP3	JP4
RS-232 (default)	Short 3-5, 4-6	Short 3-5, 4-6	Short 1-2
RS-422	Short 1-3, 2-4	Short 1-3, 2-4	Short 3-4
RS-485	Short 1-3, 2-4	Short 1-3, 2-4	Short 5-6, 7-8

### 2.3.4 Watchdog Trigger Mode Setting: JP5

The watchdog timer is an indispensable feature of the **SBC8253**. It has a sensitive error detection function and a report function. When the CPU processing comes to a halt, the watchdog either generates a NMI or resets the CPU.

Options	Settings
NMI	Short 1-2
H/W RESET	Short 2-3
Disabled	Open (default)

### 2.3.5 CMOS Clear Jumper: JP6

Options	Settings
Normal	Open (default)
Clear CMOS	Short

### 2.3.6 AT/ATX Power Selection: JP9, JP10

Options	Settings	
	JP9	JP10
AT (default)	Short 1-2	Short 1-2
ATX	Short 2-3	Short 2-3

### 2.3.7 LCD Voltage Selection: JP1

Options	Settings
5V	Short 1-2 (default)
3.3V	Short 2-3

## 2.4 Connectors

The connectors allow the CPU card to connect with other parts of the system. Some problems encountered by your system may be a result from loose or improper connections. Ensure that all connectors are in place and firmly attached. The following table lists the function of each connector on the **SBC8253**. Their corresponding pin assignments are described in Chapter 3.

Label	Connector	Label	Connector
<b>CN1</b>	36 bit LCD Connector	<b>CN12</b>	Power Connector
<b>CN2</b>	IDE Connector	<b>CN13</b>	VGA Connector
<b>CN3</b>	FDD Connector	<b>CN14</b>	Power Button Connector
<b>CN4</b>	COM1 Connector	<b>CN15</b>	CPU Fan Connector
<b>CN5</b>	24 bit LCD Connector	<b>CN16</b>	Power Connector
<b>CN6</b>	COM2 Connector	<b>CN17</b>	USB Connector
<b>CN7</b>	IrDA Connector	<b>CN18</b>	PS/2 Mouse Connector
<b>CN8</b>	Front Panel Bezel Connector	<b>CN19</b>	Keyboard & Mouse Connector
<b>CN9</b>	Ethernet RJ-45 Connector ( <b>SBC8253VE</b> only)	<b>CN20</b>	PS/2 Keyboard Connector
<b>CN10</b>	ACPI Connector	<b>J1 &amp; J2</b>	PC/104 Connector
<b>CN11</b>	Printer Port Connector		

## **Chapter 3**

### **Hardware Description**

#### **3.1 Microprocessors**

The **SBC8253** supports Intel Pentium, AMD K6/K6-2, and Cyrix 6x86 microprocessors. Systems based on these CPUs can be operated under UNIX, OS/2, Windows NT, Windows 95/98 and MS-DOS environments. The system performance depends on the microprocessor installed onboard. When installing a new CPU, the jumpers including CPU type, CPU clock, CPU voltage and PCI bus clock may need to be adjusted according to the specifications of the microprocessor. Make sure all settings are correct for the installed microprocessor to prevent any damage to it.

#### **3.2 BIOS**

System BIOS used on the **SBC8253** is Award Plug and Play BIOS. The **SBC8253** contains a single Flash EPROM and supports power-on modification of the system BIOS. Refer to Chapter 6 for a detailed description of the Award BIOS software utility program.

#### **3.3 System Memory**

The **SBC8253** supports one 168-pin DIMM socket for a maximum memory of 128MB unbuffered SDRAM. The memory module can come in sizes of 8MB, 16MB, 32MB, 64MB, and 128MB SDRAMs.

### 3.4 I/O Port Address Map

The Pentium CPU communicates via I/O ports. It has a total of 1KB port addresses available for assignment to other devices via I/O expansion cards.

<b>Address</b>	<b>Devices</b>
<b>000-01F</b>	DMA controller #1
<b>020-03F</b>	Interrupt controller #1
<b>040-05F</b>	Timer
<b>060-06F</b>	Keyboard controller
<b>070-07F</b>	Real time clock, NMI
<b>080-09F</b>	DMA page register
<b>0A0-0BF</b>	Interrupt controller #2
<b>0C0-0DF</b>	DMA controller #2
<b>0F0</b>	Clear math coprocessor busy signal
<b>0F1</b>	Reset math coprocessor
<b>0F8-0FF</b>	Math processor
<b>120</b>	Disable watchdog timer operation (read)
<b>121</b>	Enable watchdog timer operation (read)
<b>122</b>	Watchdog
<b>1F0-1F8</b>	Fixed disk controller
<b>300-31F</b>	Prototype card
<b>360-36F</b>	Reserved
<b>378-37F</b>	Parallel port #1
<b>380-38F</b>	SDLC #2
<b>3A0-3AF</b>	SDLC #1
<b>3B0-3BF</b>	MDA video card (including LPT1)
<b>3C0-3CF</b>	EGA card
<b>3D0-3DF</b>	CGA card
<b>3F0-3F7</b>	Floppy disk controller
<b>3F8-3FF</b>	Serial port #1 (COM1)
<b>2F8-2FF</b>	Serial port #2 (COM2)
<b>3F0-3F1</b>	Winbond I/O #1

### 3.5 Interrupt Controller

The **SBC8253** is a 100% PC compatible control board. It consists of 16 ISA interrupt request lines. Four out of the sixteen can either be ISA or PCI. The mapping list of the 16 interrupt request lines is shown on the following table.

<b>NMI</b>	<b>Parity check error</b>
<b>IRQ0</b>	System timer output
<b>IRQ1</b>	Keyboard
<b>IRQ2</b>	Interrupt rerouting from IRQ8 through IRQ15
<b>IRQ3</b>	Serial port #2 or #1
<b>IRQ4</b>	Serial port #1 or #2
<b>IRQ5</b>	Reserved
<b>IRQ6</b>	Floppy disk controller
<b>IRQ7</b>	Parallel port #1
<b>IRQ8</b>	Real time clock
<b>IRQ9</b>	Reserved
<b>IRQ10</b>	Reserved
<b>IRQ11</b>	Reserved
<b>IRQ12</b>	PS/2 Mouse
<b>IRQ13</b>	Math coprocessor
<b>IRQ14</b>	Primary IDE channel
<b>IRQ15</b>	Secondary IDE Channel

### 3.6 IDE Interface Connector

The **SBC8253** built-in 1 channel PCI bus enhanced IDE controller supports 2 IDE drives, master/slave mode and post write transaction mechanisms with 64-byte buffer, and master data transaction. IDE of **SBC8253** features one standard 40-pin header connector (**CN2**).

#### CN2: 40-pin IDE Connector Pin Assignment

Pin	Description	Pin	Description	Pin	Description
1	Reset #	2	GND	3	Data 7
4	Data 8	5	Data 6	6	Data 9
7	Data 5	8	Data 10	9	Data 4
10	Data 11	11	Data 3	12	Data 12
13	Data 2	14	Data 13	15	Data 1
16	Data 14	17	Data 0	18	Data 15
19	GND	20	No connector	21	PDDREQ
22	GND	23	PDIOW #	24	GND
25	PDIOR #	26	GND	27	PIORDY
28	IDSEL	29	PDDACK	30	GND-Default
31	Interrupt	32	No connector	33	PDA1
34	No connector	35	PDA0	36	PDA2
37	PDCS1 #	38	PDCS3 #	39	HDD Active #
40	GND				

## **3.7 Display Interface**

### **3.7.1 Flat Panel/CRT Interface Controller**

The built-in C&T69000 is a high-performance flat panel/super VGA display controller with onboard 2M bytes VGA RAM. It is capable of driving a wide array of flat panel and CRT displays. It can also support CRT at a maximum resolution of up to 1280x1024 with 256 colors, 640x480 with 16M colors, and panel resolutions of 1024x768, and 1280x1024. The C&T69000 also supports monochrome panels up to 64 gray scales. It displays up to 226,981 different colors on passive DSTN flat panels and up to 16M colors on 24-bit active matrix flat panels.

### **3.7.2 Features**

- Fully compatible with IBM™ VGA
- Flat panel and CRT monitor can be displayed simultaneously
- Onboard 2M bytes VGA RAM
- Supports panel resolution up to 1280x1024
- Supports non-interlaced CRT monitors with resolutions up to 1280x1024 256 colors
- Direct interface to Color and Monochrome Dual Drive and Single Drive panels
- SMARTMAP™ intelligent color to gray scale conversion enhances text legibility
- Integrated programmable linear address accelerates GUI performance
- Hardware Windows acceleration

### **3.7.3 VGA/Flat Panel Connectors**

The **SBC8253** has two connectors that support CRT VGA and flat panel displays, individually or simultaneously. **CN13** is a 15-pin connector commonly used for the CRT VGA display. **CN1** is a 44-pin connector and **CN5** is a 20-pin connector for flat panel connection. Configuration of the VGA interface is done via the software utility and no jumper setting is required.

**CN1: Flat Panel Connector Pin Assignment**

Pin	Description	Pin	Description	Pin	Description
1	-12V	2	+12VM	3	GND
4	GND	5	VDDM	6	VDDM
7	ENAVEE	8	GND	9	P0
10	P1	11	P2	12	P3
13	P4	14	P5	15	P6
16	P7	17	P8	18	P9
19	P10	20	P11	21	P12
22	P13	23	P14	24	P15
25	P16	26	P17	27	P18
28	P19	29	P20	30	P21
31	P22	32	P23	33	GND
34	GND	35	SHFCLK	36	FLM
37	M	38	LP	39	GND
40	ENABKL	41	GND	42	-SHFCLK
43	VDDM	44	VDDM		

**CN13: CRT/VGA Connector Pin Assignment**

Pin	Description	Pin	Description	Pin	Description
1	Red	2	Green	3	Blue
4	N/A	5	GND	6	AGND
7	AGND	8	AGND	9	N/A
10	GND	11	N/A	12	DDC DAT
13	Horizontal Sync	14	Vertical Sync	15	DDC CLK

**CN5: Flat Panel Connector for XVGA Pin Assignment**

Pin	Description	Pin	Description	Pin	Description
1	GND	2	GND	3	P24
4	P25	5	P26	6	P27
7	P28	8	P29	9	GND
10	GND	11	P30	12	P31
13	P32	14	P33	15	P34
16	P35	17	VDDM	18	VDDM
19	+12VM	20	+12VM		

### 3.7.4 Flat Panel Connector Pin Description

Name	Description
P0~P35	Flat panel data output
ENABKL	Activity Indicator and Enable Backlight outputs
SHFCLK	Shift clock. Pixel clock for flat panel data
M	M signal for panel AC drive control
LP	Latch pulse. Flat panel equivalent of HSYNC
FLM	First line marker. Flat panel equivalent of VSYNC
+12VM	+12V power controlled by chipset
ENAVEE	Power sequencing controls for panel LCD bias volt
VDDM	3.3V or 5V selected by Panel kit

## 3.8 Floppy Disk Controller

The **SBC8253** provides a 34-pin FCC Z.I.F. type connector, **CN3** for support of a single floppy drive. The floppy drive could be any one of the following types: 3.5" 720KB or 1.44MB/2.88MB.

### CN3: FDD Connector Pin Assignment

Pin	Description	Pin	Description	Pin	Description
1	GND	2	Reduce write current	3	GND
4	No connector	5	GND	6	No connector
7	GND	8	Index#	9	GND
10	Motor enable A#	11	GND	12	Drive select B#
13	GND	14	Drive select A#	15	GND
16	Motor enable B#	17	GND	18	Direction#
19	GND	20	STEP#	21	GND
22	Write data#	23	GND	24	Write gate#
25	GND	26	Track 0#	27	GND
28	Write protect#	29	GND	30	Read data#
31	GND	32	Side 1 select#	33	GND
34	Disk change#				

### 3.9 Parallel Port Interface

The **SBC8253** has one onboard parallel port, LPT1. LPT1 has one pin header connector (**CN11**). The onboard LPT1 of **SBC8253** is a multi-mode parallel port supporting:

- **Standard mode:** IBM PC/XT, PC/AT and PS/2™ compatible with bi-directional parallel port
- **Enhanced mode:** Enhance parallel port (EPP) compatible with EPP 1.7 and EPP 1.9 (IEEE 1284 compliant)
- **High speed mode:** Microsoft and Hewlett Packard extended capabilities port (ECP) IEEE 1284 compliant

The address selection of the onboard parallel port, in LPT1 (378H), LPT2 (278H), or disabled, is configured within the BIOS CMOS setup utility.

### 3.10 Serial Port Interface

The **SBC8253** has two onboard serial ports, **COM1** and **COM2** are RS-232, and **COM2** is RS-232/422/485 (jumper selectable).

#### 3.10.1 Serial Ports IRQ Selection

**COM1** and **COM2** have their own corresponding connectors (**CN4** and **CN6**). The **SBC8253** also uses one internal 10-pin header connector for **COM2** (**CN6**). IRQ for **COM1** and **COM2** are selected on IRQ4 or IRQ3. Both ports can be enabled or disabled via BIOS setting.

#### **CN4 and CN6: COM2 Serial Port Connector Pin Assignment**

<b>Pin</b>	<b>Description</b>	<b>Pin</b>	<b>Description</b>
<b>1</b>	Data Carrier Detect (DCD)	<b>2</b>	Data Set Ready (DSR)
<b>3</b>	Receive Data (RXD)	<b>4</b>	Request to Send (RTS)
<b>5</b>	Transmit Data (TXD)	<b>6</b>	Clear to Send (CTS)
<b>7</b>	Data Terminal Ready (DTR)	<b>8</b>	Ring Indicator (RI)
<b>9</b>	Ground (GND)	<b>10</b>	No connector

The RS-422/485 pin assignments for **COM2** are listed on the following table.


Pin #	Signal Name	
	R2-422	RS-485
1	TX-	DATA-
2	No connector	No connector
3	TX+	DATA+
4	No connector	No connector
5	RX+	No connector
6	No connector	No connector
7	RX-	No connector
8	No connector	No connector
9	GND	GND
10	No connector	No connector

### 3.11 Real Time Clock and CMOS RAM

The **SBC8253** contains a MC146818 compatible Real Time Clock (RTC) and 128 bytes of CMOS RAM in the ST 12887A, or its equivalent. The CMOS RAM stores the system configuration information entered via the SETUP program. A battery, with power lasting 10 years, keeps the stored information on the RTC and CMOS RAM active when system power is turned off.


### 3.12 Keyboard and PS/2 Mouse Connector

The **SBC8253** provides a keyboard (**CN20**) and PS/2 mouse (**CN18**) interface via a 5-pin connector. **CN19** is a DIN connector for PS/2 keyboard connection.

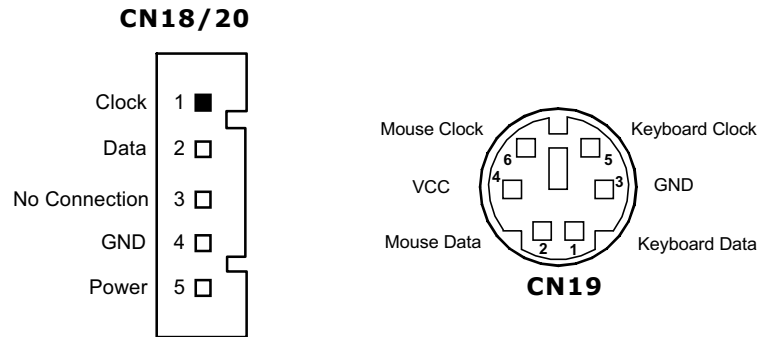

### 3.13 USB Connector

The Universal Serial Bus (USB) connector on **SBC8253** is used when installing peripherals supporting the USB interface. **CN17** is the 10-pin USB connector on the **SBC8253**.

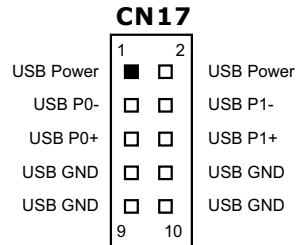

### 3.14 Ethernet Connectors

The RJ-45 provides a RJ-45 interface via **CN9**. To connect the **SBC8253** to a 10BASE-T or 100BASE-TX Ethernet, just plug one end of the cable into the **CN9** and connect the other end (phone jack) of the cable to a 10/100 Fast Ethernet.

### 3.15 CPU and System Fan Connector

**CN15** is a CPU fan connector. All CPUs require a fan for heat dispensing. The fan connector provides power to the fan.

#### CN15: CPU Fan Connectors Pin Assignment

Pin	Description
1	Speed sensor
2	+12V
3	GND

### 3.16 PC/104 Connectors

The PC/104 is an industrial standard. It is a compact form factor with dimensions of 3.6" x 3.8" and is fully compatible with the ISA Bus. The PC/104 interface is able to adapt the off-the-shelf PC/104 modules, such as sound module, fax modem module and multi-I/O module...etc.

#### J1: PC/104 Bus Pin Assignment

Pin	Signal	Pin	Signal	Pin	Signal	Pin	Signal
1	IOCHCK*	2	GND	3	SD7	4	RESETDRV
5	SD6	6	+5V	7	SD5	8	IRQ9
9	SD4	10	-5V	11	SD3	12	DRQ2
13	SD2	14	-12V	15	SD1	16	ENDXFR*
17	SD0	18	+12V	19	IOCHRDY	20	GND
21	AEN	22	SMEMW*	23	SA19	24	SMEMR*
25	SA18	26	IOW*	27	SA17	28	IOR *
29	SA16	30	DACK3*	31	SA15	32	DRQ3
33	SA14	34	DACK1*	35	SA13	36	DRQ1
37	SA12	38	REFRESH*	39	SA11	40	SYSCLK
41	SA10	42	IRQ7	43	SA9	44	IRQ6
45	SA8	46	IRQ5	47	SA7	48	IRQ4
49	SA6	50	IRQ3	51	SA5	52	DACK2*
53	SA4	54	TC	55	SA3	56	BALE
57	SA2	58	+5V	59	SA1	60	OSC
61	SA0	62	GND	63	GND	64	GND

## J2: PC/104 Bus Pin Assignments

Pin	Signal	Pin	Signal	Pin	Signal	Pin	Signal
1	GND	2	GND	3	MEMCS16*	4	SBHE*
5	IOCS16*	6	LA23	7	IRQ10	8	LA22
9	IRQ11	10	LA21	11	IRQ12	12	LA20
13	IRQ15	14	LA19	15	IRQ14	16	LA18
17	DACK0*	18	LA17	19	DRQ0	20	MEMR*
21	DACK5*	22	MEMW*	23	DRQ5	24	SD8
25	DACK6*	26	SD9	27	DRQ6	28	SD10
29	DACK7*	30	SD11	31	DRQ7	32	SD12
33	+5V	34	SD13	35	MASTER*	36	SD14
37	GND	38	SD15	39	GND	40	(KEY)

## 3.17 Pin Assignments of Other Connectors

### CN7: IrDA Connector Pin Assignment

Pin	Description
1	VCC
2	HIRRX
3	IRRX
4	GND
5	IRTX



### CN12: Power Connector Pin Assignment

Pin	Description
1	-12V
2	GND
3	GND
4	-5V


### CN16: Power Connector Pin Assignment

Pin	Description
1	+5V
2	GND
3	+12V
4	ATX 5VSB
5	GND
6	+5V

### ACPI Connector Pin Assignment

Advanced Configuration and Power Interface (ACPI) defines a flexible and extensible interface that allows system designers to select appropriate cost/feature trade-offs for power management. The interface enables and supports reliable power management through improved hardware and operating system coordination. The specification enables new power management technology to evolve independently in operating systems and hardware while ensuring that they continue to work together. **CN10** on the **SBC8253** is a 6-pin header connector that provides ACPI interface.

#### CN10

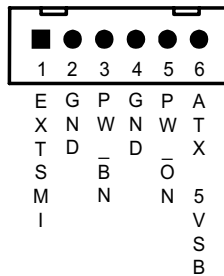

## **Chapter 4**

### **Ethernet**

#### **4.1 Introduction**

The **SBC8253** is equipped with a high performance Plug and Play Ethernet interface which is fully compliant with the IEEE 802.3 standard, and consisting of a RJ-45 interface (**CN9**).

#### **4.2 Features**

- 10MB/s and 100MB/s operations
- Supports 10MB/s and 100MB/s N-Way auto negotiation
- Full duplex capability
- Full compliance with PCI Revision 2.1
- PCI Bus Master data transfers

#### **4.3 Drivers Supported**

Bundled with popular software drivers, the **SBC8253** Ethernet interface allows great flexibility to work with all major networking operating systems including Novell NetWare v2.x, v3.x, v4.x, Microsoft LAN Manager, Win3.1, Win NT, Win95/98, IBM LAN Server, SCO UNIX or other ODI, NDIS and Packet drive compliant operating systems.

**This page does not contain any information.**

## **Chapter 5**

### **Display Drivers**

The LCD/VGA chipset used on the **SBC8253** is C&T69000 which can drive a wide range of monochrome and color flat panels including Single-Drive (SS) and Dual-Panel, Dual Drive (DD) passive DSTN and active matrix TFT / MIM LCD, EL, and Plasma panels. The 69000 supports an additional 256Kx16 DRAM providing a 32-bit video memory bus and additional display memory to support resolution up to 1280x1024 in 256 colors, 800x600 in 256 colors, and 640x480 in 16M colors. The 69000 accelerator can support up to 64 gray scales on monochrome panels, up to 226, 981 colors on passive DSTN LCDs, and up to 16M colors on 24-bit active matrix LCDs. It also offers a variety of programmable features to optimize display quality, including tall font stretching, fast vertical centering and programmable vertical stretching in graphics for handling modes with less than 480 lines.

The 69000 is fully compatible with the VGA graphics standard at the register, gate, and BIOS levels. AXIOM supplies fully VGA-compatible BIOS, end-user utilities and drivers for common application programs (e.g., Microsoft Windows , OS/2, WordPerfect, Lotus, etc.). CHIPS' drivers for Windows include a Big Cursor setting and fast panning / scrolling capabilities.

Before you begin the driver software installation, be sure to make backup copies of the *Display Driver Diskettes*.

Make sure you know the version of the application for which you are installing drivers. Your *Display Driver Diskettes* contain drivers for several versions of certain applications. For your driver to operate properly, you must install the driver for your version of the application program.

## **5.1 Windows 3.1x**

These drivers are designed to work with Microsoft Windows Version 3.1x. You may install these drivers either through Windows or in DOS.

### **5.1.1 Driver Installation - DOS Setup**

- Step 1:* Install Windows as you normally do for a VGA display. Run Windows to make sure it is working correctly. Then exit from Windows.
- Step 2:* Place the Windows 3.1x *Display Driver Diskette* in drive A. Type **A: <ENTER>** to make it be the default drive. Type **SETUP <ENTER>** to run the driver SETUP program. Press any key to get to the application list. Using the arrow keys, select **Windows Version 3.1** and press the **<ENTER>** key. Press the **<ENTER>** key to select **All Resolutions**, then press **<END>** to begin the installation. At this point, you will be asked for the path to your Windows System directory (default C:\WINDOWS). When the installation is complete, press any key to continue. Press **<ESC>** followed by **Y** to exit to DOS.
- Step 3:* Change to the directory where you installed Windows (usually C:\WINDOWS).
- Step 4:* Type **SETUP <ENTER>** to run the Windows Setup program. It will show the current Windows configuration. Use the “up” arrow key to move to the *Display* line and press **<ENTER>**. A list of display drivers will be shown. Use the arrow keys to select one of the drivers starting with an asterisk (\*) and press **<ENTER>**.

*Step 5:* Follow the directions on the screen to complete the setup. In most cases, you may press **<ENTER>** to accept the suggested option. When Setup is done, it will return to DOS. Type **WIN <ENTER>** to start Windows with the new display driver.

### 5.1.2 Changing Display Drivers from DOS

To change display drivers from DOS, change to the Windows directory and run Setup, repeating steps 4 and 5 from the previous section. Besides the special display drivers marked by an asterisk (\*), you should be able to use the following standard drivers:

- VGA                      640x480, 16 colors
- Super VGA              800x600, 16 colors

### 5.1.3 Changing Display Drivers from Windows

To change display drivers from Windows, select the *Windows Setup* icon from the Main window. You will be shown the current setup configuration. Select *Change System Settings* from the Option menu. Click on the arrow at the end of the *Display* line. A list of display drivers will be shown. Click on the driver you want to select. Then, click on the *OK* button. Follow the directions to complete the setup.

### 5.1.4 Changing Color Schemes

After you change display drivers, you may notice that the color scheme used by Windows looks strange. This is because different drivers have different default colors. You can correct this by choosing the same color scheme or a new color scheme. First, select the *Control Panel* from the *Main* window. Select the *Color* icon. You will be shown the current color scheme. Choose a new color scheme and click the *OK* button.

## **5.2 Windows NT 3.5x**

These drivers are designed to work with Microsoft Windows NT 3.5x

### **5.2.1 Driver Installation**

- Step 1* : Install Windows NT as you normally would do for a VGA display. Run Windows NT Control Panel from the Main Group. Choose the **Display option**. In the Display Settings dialog box, click on *Change Display Type*. Click on *Change* from the Adapter Type in the Display Type dialog box. Click on *Other* in the Select Device dialog box.
- Step 2*: Place the *Windows NT Display Driver Diskette* in drive A. Press **<ENTER>** and the name of the driver, *Chips and Technologies Video Controller* will appear highlighted in the Models list box. Click on **INSTALL** to install the selected driver. Once the installation is complete, the system must be shut down and restarted.
- Step 3*: Upon restart, at the **Invalid Display Selection** message, click on *OK* and select the desired display settings from the Display Settings dialog box. The system must be shut down and restarted for the new settings to take effect.

## 5.3 OS/2

These drivers are designed to function with the OS/2 Version 3.0 ONLY

### 5.3.1 Driver Installation

Before installation of this display driver, the system display should be set to VGA mode. VGA is the default video mode enabled when OS/2 is installed.

If the current system primary display is not VGA, or if a previous version of this driver is being used, the system should first be returned to VGA mode. To restore VGA mode, use Selective Install and select VGA for Primary Display.

To install this driver, do the following steps:

*Step 1:* Open an OS/2 full screen or windowed session.

*Step 2:* Locate the CHIPS 65550 Display Driver in the *Display Driver Diskette*.

Type **A: <ENTER>** to make this the default drive.

Type **INSTALL A: C: <ENTER>**

Where A: is the floppy disk drive and C: is the hard disk partition containing \OS2

Once the Install Program is completed, do a system shutdown and reboot.

A log of the information output during the install can be found in <root>:\OS2\INSTALL\CTINSTL.LOG

*Step 3:* After the system has rebooted, open the System Setup folder and run Selective Install to install the new device driver and configure the video system.

Follow the instructions on the screen to set up the OS/2 display drivers in your system. First, select Primary Display from the System Configuration Window. From the list of Primary Display Adapter Types, select Chips and Technologies 65550 and then select OK.

After the program installation is completed, the display driver will be initialized for 640x480x256 Color. Shutdown and then reboot the system for the installed changes to take effect.

To switch to a different video resolution or color depth, do the following:

#### **Change Video Resolution**

**Step 4:** To change the screen resolution or color depth:

Open the System Setup folder, then open System. From the list of available screen resolutions, select a new resolution. Point to the title-bar icon and double click. See Changing Screen Resolution in OS/2 User's Guide for more information.

**NOTE:** *Always use the INSTALL.CMD for the first installation of the video device drivers. Thereafter, perform Step 4 above when changing video resolutions.*

### **5.3.2 WIN-OS/2**

Please note the following limitations regarding WIN-OS/2.

1. The WIN-OS/2 full screen session should be set to Enhanced Capability. The default setting is Standard Mode. If this setting is not changed, Windows will not run correctly.
2. WIN-OS/2 should be started by selecting the WIN-OS/2 Full Screen Icon in the Command Prompts folder, or with the WIN command in a DOS Full Screen or OS/2 Full Screen session.
3. Do not start WIN-OS/2 in a DOS or OS/2 Window. The system does not support the enhanced video mode being used in a window, and therefore will not run.
4. When running a full screen WIN-OS/2 session, do not use ALT-HOME to switch to Windows DOS session.

### **5.3.3 Driver Diskette Copy**

For proper installation of OS/2 drivers, all diskette copies must be properly labeled "CTDISP 1".

To copy the OS/2 Display Driver Diskette, follow these instructions:

*Step 1:* Copy all files on the OS/2 Display Driver Diskette as you normally would onto another diskette.

*Step 2:* Place the diskette copy in drive A. At the C:\ prompt, type LABEL A: CTDISP 1 to properly label your diskette.

**NOTE:** *If you encounter problems when loading Full Screen OS/2 or WIN-OS/2, check if you are using lmouse.drv driver in the WINDOWS/SYSTEM subdirectory. If so, then you must edit the CHIPS550.DSP file and modify the following line:*

***BOOT OS2MOUSE.DRV MOUSE.DRV  
to  
BOOT OS2MOUSE.DRV LMOUSE.DRV***

**This page does not contain any information.**

## **Chapter 6**

### **Award BIOS Utility**

The Award BIOS ROM has a built-in Setup program that allows users to modify the basic system configuration. This type of information is stored in a battery-backed RAM (CMOS RAM) that retains the Setup information each time the power is turned off.

#### **6.1 Entering Setup**

There are two ways to enter the Setup program. You may turn ON the computer and press <Del> immediately, or press the <Del> and/or <Ctrl>, <Alt>, and <Esc> keys simultaneously when the following message appears at the bottom of the screen during POST (Power On Self Test).

**TO ENTER SETUP PRESS DEL KEY**

If the message disappears before you respond and you still wish to enter Setup, restart the system and try again. This is possible by turning the system power to OFF then to ON, pressing the "RESET" button on the system case, or by simultaneously pressing <Ctrl>, <Alt>, and <Del> keys. If you do not press the keys at the correct time and the system does not boot, an error message will be displayed and you will be prompted with the following:

**PRESS <F1> TO CONTINUE, <CTRL-ALT-ESC> OR <DEL> TO ENTER SETUP**

## 6.2 Control Keys

<b>Up arrow</b>	Moves cursor to the previous item
<b>Down arrow</b>	Moves cursor to the next item
<b>Left arrow</b>	Moves cursor to the item on the left hand
<b>Right arrow</b>	Move to the item in the right hand
<b>Esc key</b>	Main Menu -- Quits and deletes changes into CMOS Status Page Setup Menu and Option Page Setup Menu -- Exits current page and returns to Main Menu
<b>PgUp/"+" key</b>	Increases the numeric value or makes changes
<b>PgDn/"-" key</b>	Decreases the numeric value or makes changes
<b>F1 key</b>	General help, only for Status Page Setup Menu and Option Page Setup Menu
<b>(Shift) F2 key</b>	Change color from total 16 colors. F2 to select color forward, (Shift) F2 to select color backward
<b>F3 key</b>	Reserved
<b>F4 key</b>	Reserved
<b>F5 key</b>	Restores the previous CMOS value from CMOS, only for Option Page Setup Menu
<b>F6 key</b>	Loads the default CMOS value from BIOS default table, only for Option Page Setup Menu
<b>F7 key</b>	Loads the Setup default , only for Option Page Setup Menu
<b>F8 key</b>	Reserved
<b>F9 key</b>	Reserved
<b>F10 key</b>	Saves all the CMOS changes, only for Main Menu

## 6.3 Getting Help

- **Main Menu**  
The on-line description of the highlighted setup function is displayed at the bottom of the screen.
- **Status Page Setup Menu/Option Page Setup Menu**  
Press <F1> to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window press <F1> or <Esc>.

## 6.4 The Main Menu

Once you enter the Award BIOS CMOS Setup Utility, the Main Menu will appear on the screen. The Main Menu allows you to select from ten setup functions and two exit choices. Use the arrow keys to select the setup function you intend to configure then press <Enter> to accept or enter its sub-menu.

**ROM PCI/ISA BIOS (SBC8253)  
CMOS SETUP UTILITY  
AWARD SOFTWARE, INC.**

STANDARD CMOS SETUP	INTEGRATED PERIPHERALS
BIOS FEATURES SETUP	SUPERVISOR PASSWORD
CHIPSET FEATURES SETUP	USER PASSWORD
POWER MANAGEMENT SETUP	IDE HDD AUTO DETECTION
PNP/PCI CONFIGURATION	HDD LOW LEVEL FORMAT
LOAD BIOS DEFAULTS	SAVE & EXIT SETUP
LOAD SETUP DEFAULTS	EXIT WITHOUT SAVING
Esc : Quit	↑ ↓ → ← : Select Item
F10 : Save & Exit Setup	(Shift) F2 : Change Color

- **Standard CMOS Setup**  
This setup option includes all the items in a standard compatible BIOS.
- **BIOS Features Setup**  
This setup page includes all the items of Award special enhanced features.
- **Chipset Features Setup**  
This setup option includes all the items of chipset special features.
- **Power Management Setup**  
This category determines the power consumption of the system after selecting its items. Default value is Disabled.

- **PnP/PCI Configuration**  
This category specifies the assignment of all IRQs and DMAs.
- **Load BIOS Defaults**  
BIOS defaults indicate the most appropriate values of the system parameter in which the system can operate at a minimum performance.
- **Load Setup Defaults**  
Chipset defaults indicate the values required by the system for maximum performance.
- **Integrated Peripherals**  
This page allows you to set up all the onboard I/O controllers like IDE, SCSI, FDC, etc..
- **Supervisor / User Passwords**  
Changes, sets or disables password of Supervisor or User. It allows you to restrict access to the system and Setup, or just to Setup.
- **IDE HDD Auto Detection**  
Automatically configures hard disk parameters.
- **HDD Low Level Format**  
Hard disk low level format utility.
- **Save & Exit Setup**  
Saves CMOS value changes to CMOS and exits setup.
- **Exit Without Saving**  
Abandons all CMOS value changes and exits setup.

## 6.5 Standard CMOS Setup Menu

The items in Standard CMOS Setup Menu are divided into 10 categories. Each category includes no, one or more than one setup items. Use the arrow keys to highlight the item and then use the <PgUp> or <PgDn> keys to select the value you want in each item.

**ROM PCI/ISA BIOS (SBC8253)  
STANDARD CMOS SETUP  
AWARD SOFTWARE, INC.**

Date (mm:dd:yy) : Fri, Jul 18 1997							
Time (hh:mm:ss) : 00:00:00							
		CYLS	HEADS	PRECOMP	LANDZONE	SECTORS	MODE
Drive C :	AUTO	0	0	0	0	0	AUTO
Drive D :	AUTO	0	0	0	0	0	AUTO
Drive A : 1.44M , 3.5 in							
Drive B : None							
Video : EGA / VGA							
Halt On : All Errors							
		Base Memory : 640K					
		Extended Memory :14336K					
		Other Memory : 384K					
		Total Memory :15360K					
ESC : Quit		↑ ↓ → ← : Select Item		PU / PD / + / - : Modify			
F1 : Help		(Shift) F2 : Change Color					

- **Date**

The date format is <day>, <date> <month> <year>. Press <F3> to show the calendar.

<b>day</b>	The day of week, from Sun to Sat, determined by the BIOS, is read only
<b>date</b>	The date, from 1 to 31 (or the maximum allowed in the month), can key in the numerical / function key
<b>month</b>	The month, Jan through Dec.
<b>year</b>	The year, depends on the year of BIOS

- **Time**

The time format is <hour> <minute> <second> accepting either function key or numerical key. The time is calculated based on the 24-hour military-time clock. For example, 1 p.m. is 13:00:00.

● **Drive C:/D:**

The categories identify the types of one channel that have been installed in the computer. There are 45 predefined types and 2 user definable types are for Enhanced IDE BIOS. Type 1 to Type 45 are predefined. Type User is user-definable.

Press <PgUp>/<+> or <PgDn>/<-> to select a numbered hard disk type or type the number and press <Enter>. Note that the specifications of your drive must match with the drive table. The hard disk will not work properly if you enter improper information within this category. If your hard disk drive type does not match or is not listed, you can use Type User to define your own drive type manually.

If you select Type User, related information is asked to be entered to the following items. Enter the information directly from the keyboard and press <Enter>. This information should be provided in the documentation from your hard disk vendor or the system manufacturer.

If the controller of HDD interface is ESDI, select "Type 1".

If the controller of HDD interface is SCSI, select "None".

If the controller of HDD interface is CD-ROM, select "None".

<b>CYLS.</b>	number of cylinders	<b>LANDZONE</b>	landing zone
<b>HEADS</b>	number of heads	<b>SECTORS</b>	number of sectors
<b>PRECOMP</b>	write precom	<b>MODE</b>	HDD access mode

If there is no hard disk drive installed, select NONE and press <Enter>.

● **Drive A:/Drive B:**

The category identifies the types of floppy disk drive A or drive B installed in the computer.

<b>None</b>	No floppy drive installed
<b>360K, 5.25 in</b>	5.25 inch PC-type standard drive; 360Kb capacity
<b>1.2M, 5.25 in</b>	5.25 inch AT-type high-density drive; 1.2MB capacity
<b>720K, 3.5 in</b>	3.5 inch double-sided drive; 720Kb capacity
<b>1.44M, 3.5 in</b>	3.5 inch double-sided drive; 1.44MB capacity
<b>2.88M, 3.5 in</b>	3.5 inch double-sided drive; 2.88MB capacity

● **Video**

The category selects the type of adapter used for the primary system monitor that must match your video display card and monitor. Although secondary monitors are supported, you do not have to select the type in Setup. You have two ways to boot up the system:

1. When **VGA as primary and monochrome as secondary**, the selection for the video type is **"VGA Mode"**.
2. When **monochrome as primary and VGA as secondary**, the selection of the video type is **"Monochrome Mode"**.

<b>EGA/VGA</b>	Enhanced Graphics Adapter/Video Graphics Array. For EGA, VGA, SEGA, or PGA monitor adapters.
<b>CGA 40</b>	Color Graphics Adapter, power up in 40 column mode
<b>CGA 80</b>	Color Graphics Adapter, power up in 80 column mode
<b>MONO</b>	Monochrome adapter, includes high resolution monochrome adapters

● **Halt On**

The category determines whether the computer will stop if an error is detected during power up.

<b>No errors</b>	Whenever the BIOS detects a non-fatal error, the system will halt and you will be prompted.
<b>All errors</b>	The system boot will not stop for any error detected.
<b>All, But Keyboard</b>	System boot will not stop for a keyboard error; it will stop for all other errors.
<b>All, But Diskette</b>	System boot will not stop for a disk error; it will stop for all other errors.
<b>All, But Disk/Key</b>	System boot will not stop for a keyboard or disk error; it will stop for all other errors.

- **Memory**

The category is display-only which is determined by POST (Power On Self Test) of the BIOS.

- **Base Memory**

The POST of the BIOS will determine the amount of base (or conventional) memory installed in the system. The value of the base memory is typically 512K for systems with 512K memory installed on the motherboard, or 640K for systems with 640K or more memory installed on the motherboard.

- **Extended Memory**

The BIOS determines how much extended memory is present during the POST. This is the amount of memory located above 1MB in the CPU's memory address map.

- **Other Memory**

This refers to the memory located in the 640K to 1024K address space. This is memory that can be used for different applications. DOS uses this area to load device drivers to keep as much base memory free for application programs. Most use for this area is Shadow RAM.

- **Total Memory**

System total memory is the sum of basic memory, extended memory, and other memory.

## 6.6 BIOS Features Setup Menu

ROM PCI/ISA BIOS (SBC8253)  
**BIOS FEATURES SETUP**  
 AWARD SOFTWARE, INC.

Virus Warning	: Disabled	Video BIOS Shadow	: Enabled
CPU Internal Cache	: Enabled	C8000-CBFFF Shadow	: Disabled
External Cache	: Enabled	CC000-CFFFF Shadow	: Disabled
Quick Power On Self Test	: Disabled	D0000-D3FFF Shadow	: Disabled
Boot Sequence	: C,A,SCSI	D4000-D7FFF Shadow	: Disabled
Swap Floppy Drive	: Disabled	D8000-DBFFF Shadow	: Disabled
Boot Up Floppy Seek	: Disabled	DC000-DFFFF Shadow	: Disabled
Boot Up NumLock Status	: On	Cyrix 6x86/MII CPUID	: Enabled
Boot Up System Speed	: High		
Gate A20 Option	: Normal		
Typematic Rate Setting	: Disabled	LCD Type : (Type 6) 640x480 24 TFT	
Typematic Rate (Chars/Sec)	: 6	VGA Expansion(Full Screen): Disable	
Typematic Delay (Msec)	: 250	Display Type During POST: CRT Only	
Security Option	: Setup	Display Type After POST: CRT Only	
PCI/VGA Palette Snoop	: Disabled		
OS Select for DRAM >64MB	: Non-OS2	ESC : Quit    ↑ ↓ → ←: Select Item	
		F1 : Help        PU/PD/+/- : Modify	
		F5 : Old Values    (Shift) F2 : Color	
		F6 : Load BIOS Defaults	
		F7 : Load Setup Defaults	

- **Virus Warning**

This option flashes on the screen. During and after the system boot up, any attempt to write to the boot sector or partition table of the hard disk drive will halt the system with the following message. You can run an anti-virus program to locate the problem. The default setting is "Disabled".

**! WARNING !**  
*Disk boot sector is to be modified*  
*Type "Y" to accept write or "N" to abort write*  
 Award Software, Inc.

<b>Enabled</b>	Activates automatically when the system boots up causing a warning message to appear when there is an attempt to access the boot sector or hard disk partition table.
<b>Disabled</b>	No warning message will appear when attempts to access the boot sector or hard disk partition table are made.

**NOTE:** *This function is only available with DOS and other operating systems that do not trap INT13.*

● **CPU Internal Cache/External Cache**

These two options speed up memory access. However, it depends on the CPU/chipset design. The default setting is “*Enabled*”. CPUs with no built-in internal cache will not provide the “CPU Internal Cache” item on the menu.

<b>Enabled</b>	Enable cache
<b>Disabled</b>	Disable cache

● **Quick Power On Self Test**

This option speeds up Power On Self Test (POST) after you turn on the system power. If set as Enabled, BIOS will shorten or skip some check items during POST. The default setting is “*Enabled*”.

<b>Enabled</b>	Enable Quick POST
<b>Disabled</b>	Normal POST

● **Boot Sequence**

The original IBM PCs load the DOS operating system from drive A (floppy disk), so IBM PC-compatible systems are designed to search for an operating system first on drive A, and then on drive C (hard disk). However, the BIOS now offers 11 different boot sequence options of three drives each. In addition to the traditional drives A and C, options include IDE hard drives D, E, and F; plus a SCSI hard drive and a CD-ROM drive. This category determines from which drive the computer searches first for the disk operating system (i.e., DOS). Default value is “*A,C,SCSI*”.

<b>A,C,SCSI</b>	System searches for the operating system from the floppy disk drive. If it fails, it will search from the hard disk drive. If operating system is still not found, it'll seek from the SCSI device.
<b>C,A,SCSI</b>	System searches for the operating system from the hard disk drive first. If it fails, it will search from the floppy disk drive. If operating system is still not found, it'll seek from the SCSI device.
<b>C,CDROM, A</b>	System searches for the operating system from the hard disk drive first. If it fails, it will search from the IDE CDROM drive. If operating system is still not found, it'll seek from the floppy disk drive.

<b>CDROM,C,A</b>	System searches for the operating system from the IDE CDROM drive first. If it fails, it will search from the hard disk drive. If operating system is still not found, it'll seek from the floppy disk drive.
<b>D,A,SCSI</b>	System searches for the operating system from the second IDE HDD first. If it fails, it will search from the floppy disk drive. If operating system is still not found, it'll seek from the SCSI device.
<b>E,A,SCSI</b>	System searches for the operating system from the third IDE HDD first. If it fails, it will search from the floppy disk drive. If operating system is still not found, it'll seek from the SCSI device.
<b>F,A,SCSI</b>	System searches for the operating system from the fourth IDE HDD first. If it fails, it will search from the floppy disk drive. If operating system is still not found, it'll seek from the SCSI device.
<b>SCSI,A,C</b>	System searches for the operating system from the SCSI device first. If it fails, it will search from the floppy disk drive. If operating system is still not found, it'll seek from the first IDE HDD.
<b>SCSI,C,A</b>	System searches for the operating system from the SCSI device first. If it fails, it will search from the first IDE HDD. If operating system is still not found, it'll seek from the floppy disk drive.
<b>C only</b>	System only searches for the operating system from the first IDE HDD.
<b>LS/ZIP,C</b>	System searches for the operating system from the 120MB LS floppy or the 100MB ZIP drive first. If it fails, it'll search from the first IDE HDD.

● **Boot Up Floppy Seek**

During POST, BIOS will determine the floppy disk drive type, 40 or 80 tracks, installed in the system. 360Kb type is 40 tracks while 720Kb, 1.2MB and 1.44MB are all 80 tracks. The default value is "Enabled".

<b>Enabled</b>	BIOS searches for floppy disk drive to determine if it is 40 or 80 tracks. Note that BIOS can not tell from 720K, 1.2M or 1.44M drive type as they are all 80 tracks.
<b>Disabled</b>	BIOS will not search for the type of floppy disk drive by track number. There will be no warning message displayed if the drive installed is 360K.

- **Boot Up NumLock Status**

This option enables and disables the numberlock function of the keypad. The default value is "On".

<b>On</b>	Keypad functions confine with numbers
<b>Off</b>	Keypad functions convert to special functions (i.e., left/right arrow keys)

- **Boot Up System Speed**

It selects the default system speed - the speed that the system will operate immediately after power up. The default value is "High".

<b>High</b>	Sets the speed to high
<b>Low</b>	Sets the speed to low

- **Gate A20 Option**

The default value is "Fast".

<b>Normal</b>	The A20 signal is controlled by keyboard controller or chipset hardware.
<b>Fast</b>	Default: Fast. The A20 signal is controlled by Port 92 or chipset specific method.

- **Typematic Rate Setting**

This determines the typematic rate of the keyboard. The default value is "Disabled".

<b>Enabled</b>	Enable typematic rate and typematic delay programming
<b>Disabled</b>	Disable typematic rate and typematic delay programming. The system BIOS will use default value of these 2 items and the default is controlled by keyboard.

- **Typematic Rate (Chars/Sec)**

This option refers to the number of characters the keyboard can type per second. The default value is "6".

<b>6</b>	6 characters per second
<b>8</b>	8 characters per second
<b>10</b>	10 characters per second
<b>12</b>	12 characters per second
<b>15</b>	15 characters per second
<b>20</b>	20 characters per second
<b>24</b>	24 characters per second
<b>30</b>	30 characters per second

- **Typematic Delay (Msec)**

This option sets the display time interval from the first to the second character when holding a key. The default value is "250".

<b>250</b>	250 msec
<b>500</b>	500 msec
<b>750</b>	750 msec
<b>1000</b>	1000 msec

- **Security Option**

This item allows you to limit access to the system and Setup, or just to Setup. The default value is "Setup".

<b>System</b>	The system will not boot and access to Setup will be denied if the incorrect password is entered at the prompt.
<b>Setup</b>	The system will boot, but access to Setup will be denied if the correct password is not entered at the prompt.

**NOTE:** *To disable security, select PASSWORD SETTING at Main Menu and then you will be asked to enter password. Do not type anything, just press <Enter> and it will disable security. Once the security is disabled, the system will boot and you can enter Setup freely.*

- **OS Select for DRAM >64**

This segment is specifically created for OS/2 when DRAM is larger than 64MB. If your operating system is OS/2 and DRAM used is larger the 64MB, you have to select "OS 2", otherwise (under non-OS2), default is NON-OS2. The default value is "Non-OS2".

- **Video BIOS Shadow**

Video shadowing increases the video speed by copying the video BIOS into RAM. However, it is still optional depending on the chipset design. The default value of this option is "Enabled".

<b>Enabled</b>	Video BIOS shadowing is enabled
<b>Disabled</b>	Video BIOS shadowing is disabled

● **C8000 - CBFFF Shadow/DC000 - DFFFF Shadow**

These options determine whether optional ROM will be copied to RAM by 16K byte or 32K byte per/unit. The default value for all is "Disabled".

Enabled	Optional shadow is enabled
Disabled	Optional shadow is disabled

- NOTE:**
1. For C8000-DFFFF option-ROM on PCI BIOS – BIOS automatically enables the shadow RAM. User does not have to select the item.
  2. IDE second channel control:  
**Enable:** enables secondary IDE port and BIOS will assign IRQ15 for this port.  
**Disable:** disables secondary IDE port and IRQ15 is available for other device(s). The item is optional only for PCI BIOS.
  3. Some sound cards have an onboard CD-ROM controller that uses IDE Secondary Port. To avoid PCI IDE conflict, disable the IDE secondary channel control so that the CD-ROM may work.

### 6.6.1 Onboard VGA Functions

The following options allow the overriding of the VGA BIOS settings integrated in the core chipset of **SBC8253**. Take note that the settings on the following will not take effect when a VGA peripheral card is connected to the system.

● **LCD Type**

Although the system chipset already supports VGA and LCD alike, BIOS Features Setup still expands this feature further with the option to set any of the 15 LCD types. The available options are:

■ Type 1	1024 x 768	DSTN
■ Type 2	1280 x 1024	TFT
■ Type 3	640 x 480	DSTN
■ Type 4	800 x 600	DSTN
■ Type 5	640 x 480 (16bit)	TFT
■ Type 6	640 x 480 (24bit)	TFT
■ Type 7/13	1024 x 768	TFT
■ Type 8/9/10	800 x 600	TFT
■ Type 11/12	800 x 600	DSTN
■ Type 14	1280 x 1024	DSTN
■ Type 15	1024 x 600	DSTN

- **VGA Expansion (Full Screen)**

This option allows you to enlarge application screens to full screen scale onto your display. However this option is not inversely compatible, rendering no change when applications screens have resolutions larger than the display resolution. The available options are Enabled and Disabled.

- **Display Type During POST/After POST**

This item configures the viewing area for the POST sequence. When configured to the *incorrect display setting* or *Both*, it blankets the POST sequence from being viewed. If you select *Default*, this option is useless and follows the VGA BIOS settings. The available options are CRT Only, LCD Only, Both, and Default.

## 6.7 Chipset Features Setup Menu

Since the features in this section are related to the chipset on the CPU board and are completely optimized, you are not recommended to change the default settings in this setup table unless you are well oriented with the chipset features.

**ROM PCI/ISA BIOS (SBC8253)  
CHIPSET FEATURES SETUP  
AWARD SOFTWARE INC.**

Auto Configuration	: Enabled	
DRAM Timing	: 70ns	
SDRAM (CAS Lat/RAS-to-CAS)	: 3/3	
SDRAM Speculative Read	: Disabled	
System BIOS Cacheable	: Disabled	
Video BIOS Cacheable	: Disabled	
8 Bit I/O Recovery Time	: 2	
16 Bit I/O Recovery Time	: 1	
Memory Hole at 15M-16M	: Disabled	
PCI2.1 Compliance	: Disabled	
		ESC : Quit      ↑ ↓ → ← : Select Item
		F1 : Help      PU/PD/+/- : Modify
		F5 : Old Values (Shift)    F2 : Color
		F6 : Load BIOS Defaults
		F7 : Load Setup Defaults

- **Auto Configuration**

Auto Configuration selects predetermined optimal values of chipset parameters. When disabled, chipset parameters revert to setup information stored in CMOS. Many fields in this screen are not available when Auto Configuration is enabled. The default value is *“Disabled”*.
- **DRAM Timing**

The value in this field depends on performance parameters of the installed memory chips (DRAM). Do not change the value from the factory setting unless you install new memory that has a different performance rating than the original DRAMs. The default value is *“60ns”*.
- **SDRAM (CAS Lat/RAS-to-CAS)**

You can select a combination of CAS latency and RAS-to-CAS delay in HCLKs of 2/2 or 3/3. The board designer should set the values in this field, depending on the DRAM installed. Do not change the values in this field unless you change specifications of the installed DAM or the installed CPU.
- **SDRAM Speculative Read**

The chipset can “speculate” on a DRAM read address, thus reducing read latencies. The CPU issues a read request containing the data memory address. The DRAM controller receives the request. When this field is Enabled, the controller issues the read command slightly before it has finished decoding the data address.
- **System BIOS Cacheable**

Selecting Enabled allows caching of the system BIOS ROM at F0000h-FFFFFh, resulting in better system performance. However, if any program writes to this memory area, a system error may result. The default value is *“Disabled”*.
- **Video BIOS Cacheable**

Selecting Enabled allows caching of the video BIOS ROM at C0000h to C7FFFh, resulting in better video performance. However, if any program writes to this memory area, a system error may result. The default value is *“Disabled”*.

- **8/16 Bit I/O Recovery Time**

The I/O recovery mechanism adds bus clock cycles between PCI-originated I/O cycles to the ISA bus. This delay takes place because the PCI bus is so much faster than the ISA bus.

These two fields let you add recovery time (in bus clock cycles) for 16-bit and 8-bit I/O. The default values are "1" for 8 Bit I/O Recovery Time and "2" for 16 Bit I/O Recovery Time.

- **Memory Hole at 15M-16M**

You can reserve this area of system memory for ISA adapter ROM. When this area is reserved, it cannot be cached. The user information of peripherals that need to use this area of system memory usually discusses their memory requirements. The default value is "*Disabled*".

- **PCI 2.1 Compliance**

Concurrent PCI allows multiple PCI transfers from the PCI master buses to memory to CPU. By default, this field is set to *Disabled*.

## 6.8 Power Management Setup

The Power Management Setup screen appears like this:

**ROM PCI/ISA BIOS (SBC8253)  
POWER MANAGEMENT SETUP  
AWARD SOFTWARE, INC.**

Power Management	: Disabled	** Reload Global Timer Events **
PM Control by APM	: Yes	IRQ[3-7,9-15],NMI
Video Off Method	: V/H SYNC+Blank	: Disabled
Video Off After	: Standby	Primary IDE 0
Modem Use IRQ	: 3	: Disabled
Doze Mode	: Disabled	Primary IDE 1
Standby Mode	: Disabled	: Disabled
Suspend Mode	: Disabled	Secondary IDE 0
HDD Power Down	: Disabled	: Disabled
Throttle Duty Cycle	: 62.5%	Secondary IDE 1
ZZ Active in Suspend	: Disabled	: Disabled
PCI/VGA Act-Monitor	: Enabled	Floppy Disk
Soft-Off by PWR-BTTN	: Instant-Off	: Disabled
CPUFAN Off In Suspend	: Enabled	Serial Port
Resume by Ring	: Disabled	: Enabled
IRQ8 Break Suspend	: Disabled	Parallel Port
		: Disabled
		WakeUp On LAN
		: Enabled
		ESC: Quit    ↑↓→←: Select Item
		F1 : Help    PU / PD / + / - : Modify
		F5 : Old Values (Shift)F2 : Color
		F6 : Load BIOS Defaults
		F7 : Load Setup Defaults

- **Power Management**

This option allows you to select the type (or degree) of power saving for Doze, Standby, and Suspend modes. The table below describes each power management mode:

<b>Max Saving</b>	Maximum power savings. Only Available for SL CPUs. Inactivity period is 1 minute in each mode.
<b>User Define</b>	Sets each mode individually. Select time-out periods in the PM Timers section, following.
<b>Min Saving</b>	Minimum power savings. Inactivity period is 1 hour in each mode (except the hard drive).
<b>Disabled</b>	Default value

● **PM Control by APM**

If Advanced Power Management (APM) is installed on your system, selecting Yes gives better power savings. The default value is "Yes".

<b>No</b>	System BIOS will ignore APM when power managing the system
<b>Yes</b>	System BIOS will wait for APM's prompt before it enters any PM mode (i.e., DOZE, STANDBY or SUSPEND). <b>Note:</b> If APM is installed or if there is a task running, even when the timer has timed out, the APM will not prompt the BIOS to put the system into any power saving mode!

**NOTE:** If APM is not installed, this option has no effect.

● **Video Off Method**

Determines the manner in which the monitor is blanked.

<b>V/H SYNC+Blank</b>	Turns OFF vertical and horizontal synchronization ports and writes blanks to the video buffer
<b>DPMS</b>	Select this option if your monitor supports the Display Power Management Signaling (DPMS) standard of the Video Electronics Standards Association (VESA). Use the software supplied for your video subsystem to select video power management values.
<b>Blank Screen</b>	System only writes blanks to the video buffer.

● **Video Off After**

As the system moves from lesser to greater power-saving modes, select the mode in which you want the monitor to blank off. The default value is "Standby".

<b>NA</b>	System BIOS will never turn off the screen
<b>Suspend</b>	Screen off when system is in SUSPEND mode
<b>Standby</b>	Screen off when system is in STANDBY mode
<b>Doze</b>	Screen off when system is in DOZE mode

**NOTE:** Green monitors detect the V/H SYNC signals to turn off its electron gun

● **Modem Use IRQ**

<b>3, 4, 5, 7, 9, 10, 11, NA</b>	For external modem, 3 or 4 will be used for card type modem. It is up to card definition. Default is 3.
----------------------------------	---

● **Doze Mode**

After the selected period of system inactivity (1 minute to 1 hour), the CPU clock runs at slower speed while all other devices still operate at full speed. The default value is "Disabled".

Disabled	System will never enter doze mode
1/2/4/6/8/10/20/30/40 Min/1 Hr	Defines the continuous idle time before the system entering DOZE mode.

● **Standby Mode**

After the selected period of system inactivity (1 minute to 1 hour), the fixed disk drive and the video shut off while all other devices still operate at full speed. The default value is "Disabled".

Disabled	System will never enter STANDBY mode
1/2/4/6/8/10/20/30/40 Min/1 Hr	Defines the continuous idle time before the system entering STANDBY mode. If any item defined in (J) is enabled & active, STANDBY timer will be reloaded

● **Suspend Mode**

After the selected period of system inactivity (1 minute to 1 hour), all devices except the CPU shut off. The default value is "Disabled".

Disabled	System will never enter SUSPEND mode
1/2/4/6/8/10/20/30/40 Min/1 Hr	Defines the continuous idle time before the system entering SUSPEND mode. If any item defined in (J) is enabled & active, SUSPEND timer will be reloaded

● **HDD Power Down**

After the selected period of drive inactivity (1 to 15 minutes), the hard disk drive powers down while all other devices remain active. The default value is "Disabled".

Disabled	HDD's motor will not power OFF.
1/2/3/4/5/6/7/8/9/10/ 11/12/13/14/15 Min	Defines the continuous HDD idle time before the HDD enters power saving mode (motor OFF)

- **Throttle Duty Cycle**  
When the system enters Doze mode, the CPU clock runs only part of the time. You may select the percent of time that the clock runs. The default value is "62.5%".
- **ZZ Active in Suspend**  
When Enabled, the ZZ signal is active during Suspend mode. The default value is "Disabled".
- **VGA Active Monitor**  
When Enabled, any video activity restarts the global timer for Standby mode. The default value is "Enabled".
- **Soft-Off by PWR-BTTN**  
This option only works with systems using an ATX power supply. It also allows the user to define which type of soft power OFF sequence the system will follow. The default value is "Instant-Off".

<b>Instant-Off</b>	This option follows the conventional manner systems perform when power is turned OFF. Instant-Off is a soft power OFF sequence requiring only the switching of the power supply button to OFF
<b>Delay 4 Sec.</b>	Upon turning OFF system from the power switch, this option will delay the complete system power OFF sequence by approximately 4 seconds. Within this delay period, system will temporarily enter into Suspend Mode enabling you to restart the system at once.

- **CPUFAN Off in Suspend**  
When Enabled, the CPU fan turns off during Suspend mode. The default value is "Enabled".
- **Resume by Ring**  
This option allows the system to resume or wake up upon detecting any ring signals coming from an installed modem. The default value is "Enabled".
- **IRQ8 Break Suspend**  
You can turn on or off monitoring of IRQ8 (the Real Time Clock) so it does not awaken the system from Suspend mode. The default value is "Disabled".

- **Reload Global Timer Events**

When *Enabled*, an event occurring on each device listed below restarts the global time for Standby mode.

- **IRQ3 -7, 9-15, NMI**    The default value is "*Enabled*".
- **Primary IDE 0**        The default value is "*Disabled*".
- **Primary IDE 1**        The default value is "*Disabled*".
- **Secondary IDE 0**      The default value is "*Disabled*".
- **Secondary IDE 1**      The default value is "*Disabled*".
- **Floppy Disk**            The default value is "*Disabled*".
- **Serial Port**            The default value is "*Enabled*".
- **Parallel Port**         The default value is "*Disabled*".

- **WakeUp On LAN**

When *Enabled*, the onboard Ethernet network awakens the system from a soft off state.

## 6.9 PnP/PCI Configuration Setup

This section describes configuring the PCI bus system. PCI, or Personal Computer Interconnect, is a system which allows I/O devices to operate at speeds nearing the speed the CPU itself uses when communicating with its own special components. This section covers some very technical items and it is strongly recommended that only experienced users should make any changes to the default settings.

**ROM PCI/ISA BIOS (SBC8253)  
PNP/PCI CONFIGURATION SETUP  
AWARD SOFTWARE, INC.**

PNP OS Installed	: No	PCI IDE IRQ Map To	: PCI-AUTO
Resources Controlled By	: Auto	Primary IDE INT#	: A
Reset Configuration Data	: Disabled	Secondary IDE INT#	: B
		Assign IRQ For VGA	: Disabled
		Assign IRQ For USB	: Enabled
		Onboard EtherNet BootROM	: Disabled
ESC: Quit    ↑↓→←: Select Item F1 : Help    PU / PD / + / - : Modify F5 : Old Values (Shift)F2 : Color F6 : Load BIOS Defaults F7 : Load Setup Defaults			

- **PNP OS Installed**

Select Yes if the system operating environment is Plug-and-Play aware (e.g., Windows 95). The default value is "No".

- **Resources Controlled By**

The Award Plug and Play BIOS can automatically configure all the boot and Plug and Play-compatible devices. If you select Auto, all the interrupt request (IRQ), DMA assignment, and Used DMA fields disappear, as the BIOS automatically assigns them. The default value is "Manual".

- **Reset Configuration Data**  
Normally, you leave this field Disabled. Select Enabled to reset Extended System Configuration Data (ESCD) when you exit Setup if you have installed a new add-on and the system reconfiguration has caused such a serious conflict that the operating system cannot boot. The default value is *“Disabled”*.
- **PCI IDE IRQ Map To**  
This field lets you select PCI IDE IRQ mapping or PC AT (ISA) interrupts. If your system does not have one or two PCI IDE connectors on the system board, select values according to the type of IDE interface(s) installed in your system (PCI or ISA). Standard ISA interrupts for IDE channels are IRQ14 for primary and IRQ15 for secondary. The default value is *“PCI-AUTO”*.
- **Assign IRQ For VGA**  
Enable/Disable to assign IRQ for VGA. The options available are Enabled, Disabled
- **Assign IRQ for USB**  
This item allows you to assign IRQ for the USB interface. The default value is *“Enabled”*.
- **Onboard Ethernet BootROM**  
The BIOS of **SBC8253** includes Boot ROM for Novell. This item allows user to enable or disable such function.
- **Used MEM base addr**  
Select a base address for the memory area used by any peripheral that requires high memory. The default setting is N/A.

## 6.10 Load BIOS Defaults

This option allows you to load the troubleshooting default values permanently stored in the BIOS ROM. These default settings are non-optimal and disable all high-performance features.

**ROM PCI/ISA BIOS (SBC8253)  
CMOS SETUP UTILITY  
AWARD SOFTWARE, INC.**

STANDARD CMOS SETUP	INTEGRATED PERIPHERALS
BIOS FEATURES SETUP	SUPERVISOR PASSWORD
CHIPSET FEATURES SETUP	USER PASSWORD
POWER MANAGEMENT	DETECTION
PNP/PCI CONFIGURATION	LOAD BIOS Defaults (Y/N)? N
LOAD BIOS DEFAULTS	SAVING
LOAD SETUP DEFAULTS	
ESC : Quit	↑ ↓ → ← : Select Item
F10 : Save & Exit Setup	(Shift)F2 : Change Color
Load BIOS Defaults except Standard CMOS Setup	

To load BIOS defaults value to CMOS SRAM, enter “Y”. If not, enter “N”.

## 6.11 Load Setup Defaults

This option allows you to load the default values to your system configuration. These default settings are optimal and enable all high performance features.

**ROM PCI/ISA BIOS (SBC8253)  
CMOS SETUP UTILITY  
AWARD SOFTWARE, INC.**

STANDARD CMOS SETUP	INTEGRATED PERIPHERALS
BIOS FEATURES SETUP	SUPERVISOR PASSWORD
CHIPSET FEATURES SETUP	USER PASSWORD
POWER MANAGEMENT SETUP	SECURITY
PNP/PCI CONFIGURATION	LOAD SETUP DEFAULTS
LOAD BIOS DEFAULTS	EXIT WITHOUT SAVING
<b>LOAD SETUP DEFAULTS</b>	
ESC : Quit	↑ ↓ → ← : Select Item
F10 : Save & Exit Setup	(Shift)F2 : Change Color
Load BIOS Defaults except Standard CMOS Setup	

To load SETUP defaults value to CMOS SRAM, enter “Y”. If not, enter “N”.

## 6.12 Integrated Peripherals

ROM PCI/ISA BIOS (SBC8253)  
INTEGRATED PERIPHERALS  
AWARD SOFTWARE, INC.

IDE HDD Block Mode	: Disabled	ESC: Quit    ↑↓→←: Select Item F1 : Help    PU / PD / + / - : Modify F5 : Old Values    (Shift)F2 : Color F6 : Load BIOS Defaults F7 : Load Setup Defaults
IDE Primary Master PIO	: Auto	
IDE Primary Slave PIO	: Auto	
IDE Primary Master UDMA	: Disabled	
IDE Primary Slave UDMA	: Disabled	
On-Chip Primary PCI IDE	: Enabled	
USB Keyboard Support	: Disabled	
KBC input clock	: 8 MHz	
Onboard FDC Controller	: Enabled	
Onboard Serial Port 1	: 3F8/IRQ4	
Onboard Serial Port 2	: 2F8/IRQ3	
UART Mode Select	: Standard	
UART2 Duplex Mode	: Half	
RxD, TxD Active	: Hi, Lo	
IR Transmission delay	: Enabled	
Onboard Parallel Port		
Parallel Port Mode		
ECP Mode Use DMA	: 3	
EPP Mode Select	: EPP1.9	

The four items related to the WDT describe the set up of the Watchdog Timer (WDT), please refer to the Appendix for details.

- **IDE HDD Block Mode**

Block mode is also called block transfer, multiple commands, or multiple sector read/write. If your IDE hard drive supports block mode (most new drives do), select Enabled for automatic detection of the optimal number of block read/writes per sector the drive can support. The default value is *“Enabled”*.

- **IDE Primary/Secondary Master/Slave PIO**

The four IDE PIO (Programmed Input/Output) fields let you set a PIO mode (0-4) for each of the four IDE devices that the onboard IDE interface supports. Modes 0 through 4 provide successively increased performance. In Auto mode, the system automatically determines the best mode for each device. The default value is *“Auto”*.

- **IDE Primary Master/Slave UDMA**

Ultra DMA/33 implementation is possible only if your IDE hard drive supports it and the operating environment includes a DMA driver (Windows 95 OSR2 or a third-party IDE bus master driver). If your hard drive and your system software both support Ultra DMA/33, select Auto to enable BIOS support. The default value is "Auto".
- **On-Chip Primary PCI IDE**

The integrated peripheral controller contains an IDE interface with support for two IDE channels. Select Enabled to activate each channel separately. The default value is "Enabled".

**NOTE:** *Choosing Disabled for these options will automatically remove the IDE Primary Master/Slave PIO items on the menu.*
- **USB Keyboard Support**

Select Enabled if your system contains a USB controller and you have a USB keyboard. The default value is "Disabled".
- **KBC input clock**

This item sets the input clock for the keyboard controller. The default value is "8 MHz".
- **Onboard FDC Controller**

Select Enabled if your system has a floppy disk controller (FDC) installed on the system board and you wish to use it. If you install an add-in FDC or the system has no floppy drive, select Disabled in this field. The default value is "Enabled".
- **Onboard Serial port 1/2**

Select an address and corresponding interrupt for the first and second serial ports. The default values are "3F8/IRQ4" for Onboard Serial Port 1 and "2F8/IRQ3" for Onboard Serial Port 2.

● **UART Mode Select**

The second serial port offers these infrared interface modes:

1. IrDA
2. ASKIR IrDA-compliant serial infrared port
3. Normal (default value)

**NOTE:** *The UART Mode Select will not appear on the menu once you disable the setting of Onboard Serial Port 2.*

When UART Mode Select is set as ASKIR or IrDA, the options RxD, TxD Active and IR Transmission delay will appear.

● **POWER ON Function**

This option allows users to select the type of power ON sequence for the system to follow. The default value is “*Button-Only*”.

<b>BUTTON-ONLY</b>	Follows the conventional way of turning OFF system power (via power button).
<b>Password</b>	Upon selecting this option, the KB POWER ON Password line appears. Press <Enter> and you'll be prompted to enter and confirm a password of your choice. After setting the password, succeeding attempts to power ON the system will result to null. For system to activate, user must input the password via keyboard then press <Enter>.
<b>Hot KEY</b>	This option is very similar with that of Password. Hot-key combinations range from Ctrl-F1 to Ctrl-F12. User may define this combination from the Hot key Power ON option.
<b>Mouse Left</b>	This allows system to POWER ON by clicking the left mouse button. To enable, user must reboot and allow system to finish booting up otherwise the setting will not take effect.
<b>Mouse Right</b>	This allows system to POWER ON by clicking the right mouse button. To enable this setting, user must reboot and allow system to finish the boot up process otherwise the setting will not take effect.

● **UART Duplex Mode**

This item allows you to select the IR function when you select the UART 2 Mode is ASKIR. The available choices are *Half* and *Full*.

● **RxD, TxD Active**

This item allows you to determine the active of RxD, TxD. The available choices are “*Hi, Hi*”, “*Lo, Lo*”, “*Lo, Hi*”, and “*Hi, Lo*”.

- **Onboard Parallel Port**

Select a logical LPT port name and matching address for the physical parallel (printer) port. The default value is “378/IRQ7”.

**NOTE:** *Choosing Disabled for this option will remove the Parallel Port Mode option on the menu.*

- **Parallel Port Mode**

Select an operating mode for the onboard parallel (printer) port. Select Normal unless your hardware and software require one of the other modes offered in this field. The default value is “SPP”.

**NOTE:** *Selecting EPP on this option will allow selection to the EPP Mode (EPP1.7, EPP1.9)  
ECP mode selection will provide option for ECP Mode Use DMA.  
Choosing ECP+EPP modes will provide selections for both EPP Mode Select and ECP Mode Use DMA.*

## **6.13 Supervisor/User Password Setting**

You can set either supervisor or user password, or both of them. The differences between are:

1. **supervisor password:** can enter and change the options of the setup menus.
2. **user password:** just can enter but do not have the right to change the options of the setup menus.

When you select this function, the following message will appear at the center of the screen to assist you in creating a password.

**ENTER PASSWORD:**

Type the password with eight characters at most, and press <Enter>. The password typed will now clear any previously entered password from CMOS memory. You will be asked to confirm the password. Type the password again and press <Enter>. You may also press <Esc> to abort the selection and not enter a password.

To disable password, just press <Enter> when you are prompted to enter password. A message will confirm the password being disabled. Once the password is disabled, the system will boot and you can enter Setup freely.

**PASSWORD DISABLED.**

When a password is enabled, you have to type it every time you enter Setup. This prevents any unauthorized person from changing your system configuration.

Additionally when a password is enabled, you can also require the BIOS to request a password every time the system reboots. This would prevent unauthorized use of your computer.

You determine when the password is required within the BIOS Features Setup Menu and its Security option. If the Security option is set to "System", the password is required during boot up and entry into Setup. If set as "Setup", prompting will only occur prior to entering Setup.

## 6.14 IDE HDD Auto Detection

The Enhance IDE feature is included in all Award BIOS. The following is a brief description of this feature.

### 1. Setup Changes

<I> Auto-detection

BIOS setup will display all possible modes supported by the HDD including NORMAL, LBA & LARGE.

If HDD does not support LBA modes, no 'LBA' option will be shown.

Users can select a mode appropriate for them.

ROM/PCI/ISA BOPS (2XXXXXXX)  
CMOS SETUP UTILITY  
AWARD SOFTWARE, INC.

HARD DISKS	TYPE	SIZE	CYLS	HEAD	PRECOMP	LANDZ	SECTOR	MODE
Primary Master :								
Select Primary Master Option (N = Skip) : N								
OPTION	SIZE	CYLS	HEADS	PRECOMP	LANDZONE	SECTORS	MODE	
1 (Y)	516	1120	16	65535	1119	59	NORMAL	
2	516	524	32	0	1119	63	LBA	
3	516	560	32	65535	1119	59	LARGE	

<II> Standard CMOS Setup

	CYLS	Heads	Precomp	Landzone	Sector	Mode
Primary Master :User(516MB)	1120	16	65535	1119	59	NORMAL
Primary Slave :None (203MB)	684	16	65535	685	38	-----
Secondary Master :	None	0	0	0	0	0 0
Secondary Slave :	None	0	0	0	0	0 0

When HDD type is in 'user' type, the "MODE" option will be open for user to select HDD mode.

## 2. HDD Modes

The Award BIOS supports 3 HDD modes : NORMAL, LBA & LARGE

### ■ NORMAL mode

Generic access mode in which neither the BIOS nor the IDE controller will make any transformations during accessing.

The maximum number of cylinders, head & sectors for NORMAL mode are 1024, 16 & 63.

no. Cylinder	( 1024)
x no. Head	( 16)
x no. Sector	( 63)
x no. per sector	( 512)
<hr/>	
	528 Megabytes

If user sets his HDD to NORMAL mode, the maximum accessible HDD size will be 528MB even though its physical size may be greater than that!

### ■ LBA (Logical Block Addressing) mode

A new HDD accessing method to overcome the 528MB bottleneck. The number of cylinders, heads & sectors shown in setup may not be the number physically contained in the HDD.

During HDD accessing, the IDE controller will transform the logical address described by sector, head & cylinder number into its own physical address inside the HDD.

The maximum HDD size supported by LBA mode is 8.4GB which is obtained by the following formula:

no. Cylinder	( 1024)
x no. Head	( 255)
x no. Sector	( 63)
x bytes per sector	( 512)
<hr/>	
	814 Gigabytes

■ **LARGE mode**

Extended HDD access mode supported by Award Software.

Some IDE HDDs contain more than 1024 cylinder without LBA support (in some cases, user does not want LBA). The Award BIOS provides another alternative to support these kinds of HDD!

Example of LARGE mode:

<u>CYLS</u>	<u>HEADS</u>	<u>SECTOR</u>	<u>MODE</u>
1120	16	59	NORMAL
560	32	59	LARGE

BIOS tricks DOS (or other OS) that the number of cylinders is less than 1024 by dividing it by 2. At the same time, the number of heads is multiplied by 2. A reverse transformation process will be made inside INT13h in order to access the right HDD address!

Maximum HDD size:

	no. Cylinder	( 1024)
x	no. Head	( 32)
x	no. Sector	( 63)
x	bytes per sector	( 512)

---

1 Gigabytes

3. Remarks

To support LBA or LARGE mode of HDDs, there must be some software involved. All these software are located in the Award HDD Service Routine (INT 13h). It may fail to access a HDD with LBA (LARGE) mode selected if you are running under a Operating System that replaces the whole INT 13h.

## 6.15 Hard Disk Low Level Format Utility

This Award Low-Level-Format Utility is designed as a tool to save your time formatting your hard disk. The utility automatically looks for the necessary information of the drive you selected. This utility also searches for bad tracks and lists them for your reference.

Shown below is the Main Menu after you enter into the Award Low-Level-Format Utility.

<b>Hard Disk Low Level Format Utility</b>				BAD TRACKS TABLE NO. CYLS HEAD			
SELECT DRIVE BAD TRACK LIST PREFORMAT							
Current select drive is : C							
DRIVE: C    CYLINDER : 0    HEAD: 0							
	Size	CYLS	Head	Precomp	Landz	Sector	Mode
Primary Master:	0	0	0	0	0	0	AUTO
Primary Slave:	0	0	0	0	0	0	AUTO
Up/Down - Select item				Enter - Accept		ESC-Exit/Abort	
Copyright © Award Software, Inc. 1992-94 All Rights Reserved							

- **Control Keys**  
Use the Up and Down arrow keys to move around the selections displayed on the upper screen. Press <Enter> to accept the selection. Press <Esc> to abort the selection or exit the utility.
- **Select Drive**  
Select from installed hard disk drive C or D. Listed at the bottom of the screen is the drive automatically detected by the utility.
- **Bad Track List**
  - **Auto scan bad track**  
The utility will automatically scan bad tracks and list the bad tracks on the window at the right side of the screen.
  - **Add bad track**  
Directly type in the information of the known bad tracks on the window at the right side of the screen.

- **Modify bad track**  
Modify the information of the added bad tracks in the window at the right side of the screen.
- **Delete bad track**  
Delete the added bad tracks on the window at the right side of the screen.
- **Clear bad track table**  
Clear the whole bad track list on the window at the right side of the screen.
- **Preformat**
  - **Interleave**  
Select the interleave number of the hard disk drive you wish to perform low level format. You may select from 1 to 8. Check the documentation that came with the drive for the correct interleave number, or select 0 for utility automatic detection.
  - **Auto scan bad track**  
This allows the utility to scan first then format by each track.
  - **Start**  
Press <Y> to start low level format.

## 6.16 Save & Exit Setup

This allows you to determine whether or not to accept the modifications. Typing “Y” quits the setup utility and saves all changes into the CMOS memory. Typing “N” brings you back to Setup utility.

**ROM PCI/ISA BIOS (SBC8253)  
CMOS SETUP UTILITY  
AWARD SOFTWARE, INC.**

STANDARD CMOS SETUP	INTEGRATED PERIPHERALS
BIOS FEATURES SETUP	SUPERVISOR PASSWORD
CHIPSET FEATURES SETUP	USER PASSWORD
POWER MANAGEMENT	DETECTION
PNP/PCI CONFIGURATION	SETUP
LOAD BIOS DEFAULTS	EXIT WITHOUT SAVING
LOAD SETUP DEFAULTS	
ESC : Quit	↑ ↓ → ← : Select Item
F10 : Save & Exit Setup	(Shift) F2 : Change Color
Save Data to CMOS & Exit Setup	

## 6.17 Exit Without Saving

Select this option to exit the Setup utility without saving the changes you have made in this session. Typing “Y” will quit the Setup utility without saving the modifications. Typing “N” will return you to Setup utility.

ROM PCI/ISA BIOS (SBC8253)  
CMOS SETUP UTILITY  
AWARD SOFTWARE, INC.

STANDARD CMOS SETUP	INTEGRATED PERIPHERALS
BIOS FEATURES SETUP	SUPERVISOR PASSWORD
CHIPSET FEATURES SETUP	USER PASSWORD
POWER MANAGEMENT	DETECTION
PNP/PCI CONFIGURATION	SETUP
LOAD BIOS DEFAULTS	EXIT WITHOUT SAVING
LOAD SETUP DEFAULTS	
ESC : Quit	↑ ↓ → ← : Select Item
F10 : Save & Exit Setup	(Shift) F2 : Change Color
Abandon all Data & Exit Setup	

## 6.18 Power-On Boot

After you have made all the changes to CMOS values and the system cannot boot with the CMOS values selected in Setup, restart the system by turning it OFF then ON or press the "RESET" button on the system case. You may also restart by simultaneously pressing the <Ctrl>, <Alt>, and <Delete> keys. Upon restarting the system, immediately press <Insert> to load the BIOS default CMOS values for boot up.

## Appendix A

### Watchdog Timer

#### Using the Watchdog Function

The **SBC8253** CPU card uses version 2.0 of the watchdog timer. This onboard WDT generates either a system reset or non-maskable interrupt (NMI), depending on the settings made on jumper **JP5** of **SBC8253**. Follow the steps below to enable and program the watchdog function of **SBC8253**.

Start

↓

Un-Lock WDT : OUT 120H 0AH ; enter WDT function  
OUT 120H 0BH ; enable WDT function

↓

Set multiple (1~4) : OUT 120 0NH ; N=1,2,3 or 4

↓

Set base timer (0~F) : OUT 121 0MH ; M=0,1,2,...F

↓

WDT counting

↓

re-set timer : OUT 121 0MH ; M=0,1,2,...F

↓

IF No re-set timer : WDT time-out, generate RESET or NMI

↓

IF to disable WDT : OUT 120 00H ; Can be disable at any time

<b>M</b>	<b>N</b>			
	<b>1</b>	<b>2</b>	<b>3</b>	<b>4</b>
<b>0</b>	0.5 sec.	5 secs.	50 secs.	100 secs.
<b>1</b>	1 sec.	10 secs.	100 secs.	200 secs.
<b>2</b>	1.5 secs.	15 secs.	150 secs.	300 secs.
<b>3</b>	2 secs.	20 secs.	200 secs.	400 secs.
<b>4</b>	2.5 secs.	25 secs.	250 secs.	500 secs.
<b>5</b>	3 secs.	30 secs.	300 secs.	600 secs.
<b>6</b>	3.5 secs.	35 secs.	350 secs.	700 secs.
<b>7</b>	4 secs.	40 secs.	400 secs.	800 secs.
<b>8</b>	4.5 secs.	45 secs.	450 secs.	900 secs.
<b>9</b>	5 secs.	50 secs.	500 secs.	1000 secs.
<b>A</b>	5.5 secs.	55 secs.	550 secs.	1100 secs.
<b>B</b>	6 secs.	60 secs.	600 secs.	1200 secs.
<b>C</b>	6.5 secs.	65 secs.	650 secs.	1300 secs.
<b>D</b>	7 secs.	70 secs.	700 secs.	1400 secs.
<b>E</b>	7.5 secs.	75 secs.	750 secs.	1500 secs.
<b>F</b>	8 secs.	80 secs.	800 secs.	1600 secs.